

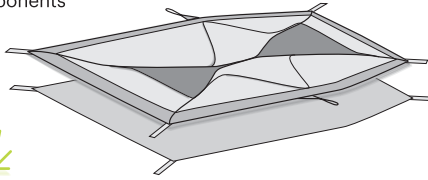


- 1** Identify all tent components (see list below).

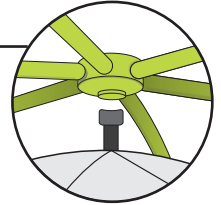


- 2** Spread out footprint with waterproof coated side up. Place tent body on top of footprint and locate 4 corner webbing loops with grommets.


- 3** Assemble pole set. Place poles on tent with shorter ridge poles over the door opening + *hub clip attachment facing down*. Insert main pole tips into each of the 4 corner grommets.

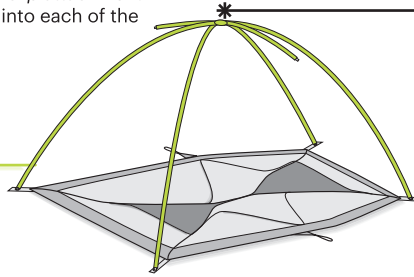

- 4** Locate tent peak clip + attach to underside of hub.

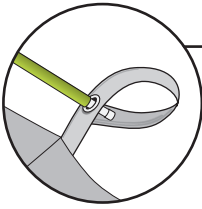



- 6** Attach all tent clips to the poles.

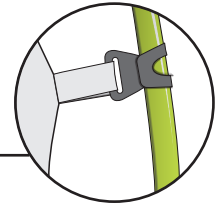

- 5** Locate webbing loop above each door and insert ridge pole tips into grommet.



- 7** Stake out 4 corners and 2 midpoints of tent.

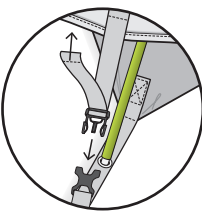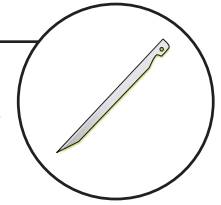

- 8** Place fly over tent body. Match the corresponding orange + blue webbing on fly + tent for correct orientation. Locate hook + loop fasteners on underside of fly + attach to tent poles.

- 9** Connect matching buckles on fly + tent body at 4 corners. Adjust fly tension via corner webbing. Stake out vestibules. Attach guylines to guyout loops. Stake out all guylines (additional stakes required).



TENT CONTENTS

Tent body + Tent fly
Tent footprint
Complete pole assembly
Stakes (11)
Guylines (6)
Gear loft

QUESTIONS?

Johnson Outdoors Gear, Inc.
USA: 1-800-572-8822
www.eurekacamping.com
Johnson Outdoors Canada
Canada: 1-800-263-6390
www.eurekatentscanada.com

TENT TIPS

- Always stake down tent, including all guyout points.
- Increase interior airflow by opening the fly vent, various windows, and using the High/Low Air Exchange fly feature.

TENT CARE

- Make sure the tent is completely dry, then store loosely rolled in a dry cool place.
- Clean your tent by setting it up and wiping it down with a mild soap and luke warm water. Never use laundry detergent, washing machines or dryers.

WARRANTY

- Your Eureka! tent is covered by a limited lifetime warranty. For more details please visit the website or contact customer service.