



C € ĽK FAI ⊕

Quick Installation Guide

TL-WPA8631P



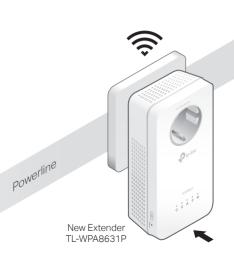

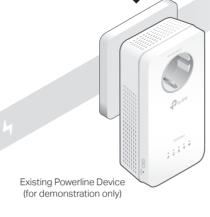

- Plug in the new extender near one of your existing powerline devices.
- 2 Check the new extender's Powerline LED ${\bf \hat{a}}$. Is it on?

Yes > Step 4


No > Step 3

- Pair the powerline devices.
- A Press the Pair button on the existing powerline device for 1 second. The Power LED **ψ** starts blinking.

Note: If the Power LED does not blink, press the Pair button again.


B Within 2 minutes, press the Pair button on the new extender for 1 second. The Power LED 𝔞 starts blinking. When the Powerline LED శਿ on the new extender turns on, the pairing process is complete.

Note: If the powerline LED is off, try another wall socket or pair again.

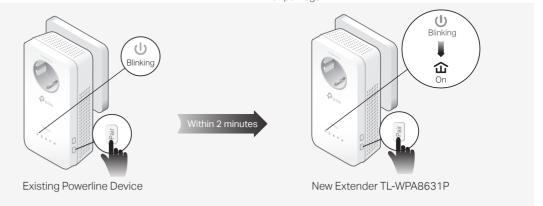

4 Enjoy!

Relocate the extender to the Wi-Fi "dead" zone. Connect your devices to the internet using the default SSIDs (network name) and password on the label at the side of the extender.

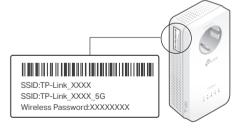

If you cannot find the SSIDs in your Wi-Fi network list, your new extender has automatically copied over the existing wireless settings. In this case, use the SSID and password of your existing powerline network to connect.

If you want to unify your Wi-Fi networks, refer to the back page for instructions.

Attention

1. Use the product only in the upright direction.









- 2. Plug powerline devices into wall outlets instead of power strips.
- Using a power strip will affect network performance and may even cause dropped connections.
- Wall Outlet







Unify Your Wi-Fi Networks

Copy SSID and password from your router via any of the methods below to create one unified Wi-Fi network throughout your home.

Note: If your router doesn't support the two methods below, refer to Personalize Your Networks section to manually change the extender's Wi-Fi settings.

Method ONF: Via Wi-Fi button

Note: You can use this method when your router has a WPS button.

- 1. Press your router's WPS button.
- 2. (Within 2 minutes) press the extender's Wi-Fi button for 1 second. The extender's 2.4 GHz and 5 GHz Wi-Fi LEDs 🕿 should start blinking. When they turn solid on, Wi-Fi settings have been copied.

Note: If Wi-Fi settings are not copied within 2 minutes, manually change the extender's Wi-Fi settings.


3. Relocate the extender and enjoy the internet using your router's SSID and password.

Within 2 minutes 0 10 10 10 10 10 10 Wireless Router Extende

Method TWO: Via EasyMesh

Note: You can use this method when your router supports EasyMesh.

- 1 Connect your computer to the extender wirelessly. Visit http://tplinkplc.net.
- 2 Go to EasyMesh and enable it. Then the extender will automatically join an EasyMesh network and copy the wireless settings from the
- 3 Enjoy the internet using your router's SSID and password. Any changes to the Wi-Fi settings of your router will be automatically copied to the extender.

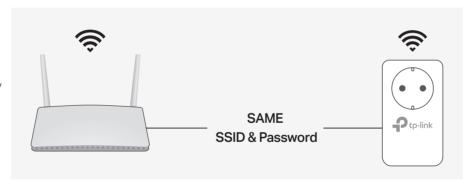

Personalize Your Networks

Manage your powerline devices using any of the methods below. You can change the SSID and password, set Wi-Fi schedules, create a quest network and more

tpPLC App

tpPLC Utility

For easy management via your smartphone or tablet. download the app from Apple App Store or Google Play, or simply scan the QR code.





For easy management via your computer, download the utility on the product's Support page at https://www.tp-link.com.

Note: For detailed instructions, refer to the product manual on the product's Support page.

Web Interface

To access all settings, connect to an extender wirelessly and visit

Note: For detailed instructions, refer to the product manual on the product's Support page.

EasyMesh-Compatible

You can experience strong, stable, and seamless wireless connections throughout your home with EasyMesh, a whole home mesh standard that works across different access points for ultimate flexibility.

Seamless Roaming

Connects mobile devices to your routers or extenders that provide the best coverage. Devices compatible with EasyMesh also share a single Wi-Fi name so you stay connected in every room.

Easy Setup and Management

Easily set up and manage a unified Mesh network.

Flexible Scalability

Flexibly scale your home networking with different vendors,* different topologies, different Protocols and different product categories.

*TP-Link EasyMesh-compatible products can network with other devices that use EasyMesh. Failed connections may be due to firmware conflicts of different vendors.

The EasyMesh-Compatible function is still being developed on some models and will be supported in subsequent software updates. This product is compatible with standardized EasyMesh technology but has not obtained the Wi-Fi EasyMesh certification.

For more information, visit https://www.tp-link.com/easymesh/.

Physical Appearance

Extender TL-WPA8631P

a Integrated Electrical Socket

Used as a pass-through AC outlet to power other devices. It also reduces some electrical noise that may interfere with powerline

b LED Button

Press for 1 second to turn all LEDs on or off.

Press for at least 5 seconds until all LEDs turn off to reset the extender to factory default settings.

Press for 1 second to begin or stop copying Wi-Fi settings from

Press and hold for about 5 seconds to turn Wi-Fi on or off

e Pair Button

Press for 1 second on two powerline devices within two minutes

Frequently Asked Questions

Q1. How do I reset my extender to factory default settings?

A. With the extender plugged into an electrical outlet, press and hold the Reset button until all LEDs turn off. When the LEDs turn back on, the reset process is complete.

Q2. What should I do if my powerline network has no internet connection?

- A1. Make sure all powerline adapters and extenders are on the same service panel.
- A2. Make sure each device's Powerline LED **a** is on. If not, pair all devices again.
- A3. Make sure all devices are correctly and securely connected.
- A4. Check if you have an internet connection by connecting the computer directly to the modem or router.

Q3. What should I do if a successfully-paired extender does not reconnect after it is relocated?

- A1. Make sure all powerline adapters and extenders are on the same service panel.
- A2. Pair it again with another Powerline device, and make sure the Powerline LED 🏠 is on before relocating it.
- A3. Check for possible interference due to a washing machine, air conditioner or other household appliance that may be too close to one of the powerline devices. Plug the appliance into the integrated electrical socket to remove the electrical noise if your powerline device has an integrated electrical socket.



To ask questions, find answers, and communicate with TP-Link users or engineers. please visit https://community.tp-link.com to join TP-Link Community.



For technical support, replacement services, user guides, and other information, please visit https://www.tp-link.com/support, or simply scan the QR code.



TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of directives 2014/53/EU, 2009/125/EC, 2011/65/EU and (EU)2015/863. The original EU Declaration of Conformity may be found at https://www.tp-link.com/en/support/ce/

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant

provisions of the Radio Equipment Regulations 2017. The original UK Declaration of Conformity may be found at https://www.tp-link.com/support/ukca/

Safety Information

- Keen the device away from water fire humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device. If you need service, please contact us.
- · Do not use the device where wireless devices are not allowed.
- For passthrough devices, plug the power strips into the integrated electrical sockets of the devices, but devices of the same or another type not be stacked in normal use.
- · Plug the powerline devices directly into the wall outlets but not the power strips.

Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.

. ⊕ ⊕ ∧ ⊕ ⊕