

# LANCOM R&S®Unified Firewalls

First installation steps for UF-160 & UF-260

Thank you for choosing a LANCOM R&S®Unified Firewall. LANCOM and Rohde & Schwarz are working together to create a unique combination of trusted network infrastructure and IT Security “Made in Germany”.

## Start-up

Your LANCOM R&S®Unified Firewall is configured via a web client. First make sure that the network adapter of your configuration PC is configured for retrieving an IP address automatically. Log into the web client using a current browser (we recommend Google Chrome™ or Mozilla Firefox). To do this, connect via the LAN1 (UF-160) resp. LAN2 (UF-260) (eth1 / eth2 in the configuration GUI) interface of the firewall and reach the web client at the URL:

UF-160: <https://192.168.1.254:3438/>

UF-260: <https://192.168.2.254:3438/>

For the first login, please use the following credentials:

**User:** admin

**Password:** admin

## Setup tutorials

Here are some helpful videos and tutorials to help you set up your LANCOM R&S®Unified Firewall:

<https://www.lancom-systems.com/uf-tutorials>

Alternatively, you can scan this QR code to view it on your smartphone:

