

# USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About ⚠ WARNING and ⚠ CAUTION Notices





<b>⚠ WARNING</b>	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
<b>⚠ CAUTION</b>	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols


<b>⚠</b>	The ⚠ symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
<b>⊘</b>	The ⊘ symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
<b>⚡</b>	The ⚡ symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

ALWAYS OBSERVE THE FOLLOWING


## ⚠ WARNING

- Before using this unit, make sure to read the instructions below, and the Owner's Manual. 
- Do not open or perform any internal modifications on the unit. 
- Do not attempt to repair the unit, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor. 
- In households with small children, an adult should provide supervision until the child is capable of following all the rules essential for the safe operation of the unit. 

## ⚠ CAUTION

- Try to prevent cords and cables from becoming entangled. Also, all cords and cables should be placed so they are out of the reach of children. 

## ⚠ CAUTION

- Keep any screws, cable clip and rubber foot you may remove and the included screws in a safe place out of children's reach, so there is no chance of them being swallowed accidentally. 

## Important Notes


- For everyday cleaning wipe the unit with a soft, dry cloth or one that has been slightly dampened with water. To remove stubborn dirt, use a cloth impregnated with a mild, non-abrasive detergent. Afterwards, be sure to wipe the unit thoroughly with a soft, dry cloth.
- Never use benzine, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.
- When connecting / disconnecting all cables, grasp the connector itself—never pull on the cable. This way you will avoid causing shorts, or damage to the cable's internal elements.
- To prevent malfunction and/or damage to speakers or other devices, always turn down the volume, and turn off the power on all devices before making any connections.

# Roland® HOLDER DH-01 Owner's Manual

Before using this unit, carefully read the sections entitled: "USING THE UNIT SAFELY" and "IMPORTANT NOTES". These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new unit, Owner's Manual should be read in its entirety. The manual should be saved and kept on hand as a convenient reference.

## Check the parts

Before you begin assembly, check that you have all of the parts. You will also need a Phillips screwdriver.


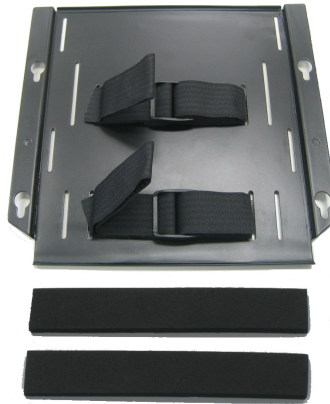


- Holder (with two pieces of Velcro strap)
- Two cushions
- One cable clip
- Four screws
- \* A CD drive is not included.
- \* Refer to the Roland website for details on Compatible CD Drives.

## Attachment procedure

1. Attach the CD drive to the holder
  2. Attach the drive and holder to the piano
- \* Before you attach the drive, check to make sure that your model of instrument is supported.

## Supported models

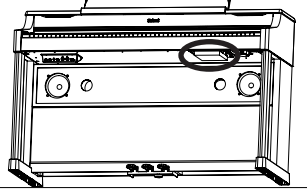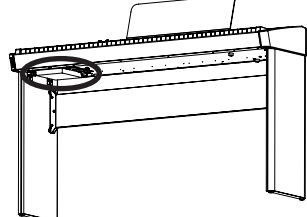Supported model	Location on piano at which to attach the drive
RG-3, HP-207, HP-205, HP-203	Attach at right side. Read "attachment method A." 
FP-7	Attach at left side. Read "attachment method B." 

As of February 2007

- \* You can't use the DH-01 with a model that's not supported.
- \* If your model is not in the above list, refer to owner's manual of your model.
- \* Refer to the Roland website for details on supported models.
- \* In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.



Copyright © 2006 ROLAND CORPORATION

All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.

0456689 3KH


## 1. Attach the CD drive to the holder (applies to all models)

Attach the CD drive to the holder as shown in the illustration below that depicts the completed assembly.

### Completed assembly




### Schematic diagram

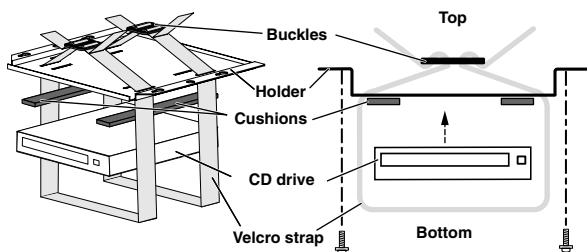


## Attachment procedure

1. Change the position of the Velcro strap appropriately for the size of your CD drive, as shown in the illustration below.

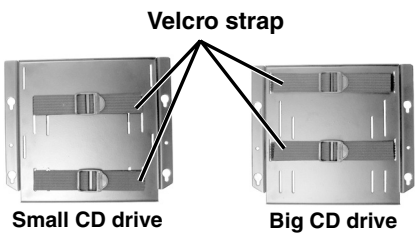

- \* Make sure that the top and bottom surfaces are oriented correctly.

2. Position the CD drive where you want to attach it, and affix the cushions to the holder as shown in the illustration.

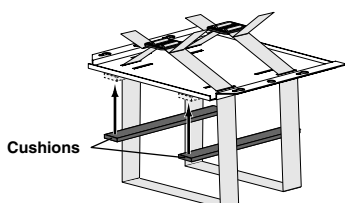


- \* The cushions have a peel-off backing. Peel off the backing when you're ready to affix the cushions.
- \* Use these cushions if you find it difficult to fasten your CD drive using the Velcro strap.
- \* Carry out this procedure with the Velcro straps attached.


3. Using the two pieces of Velcro strap, fasten your CD drive to the holder as shown in the illustration.



- \* Fasten the Velcro strap firmly so that there is no slack. If the Velcro strap becomes loose, your CD drive may fall down.
- \* Position the buckles of the Velcro strap in the center as shown in the illustration.

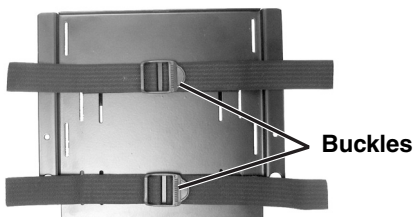

4. Cut the Velcro strap to an appropriate length.

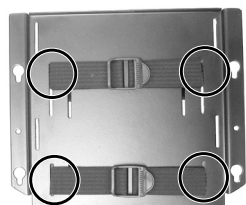


Now you're ready to attach the drive and holder assembly to your piano.

## 2. Attach the assembled drive and holder to your piano


### Attachment method A

5. Using the four included screws, fasten the holder (with the attached CD drive) to the bottom of your digital piano as shown in the illustration.

Fasten it securely so that it does not wobble.

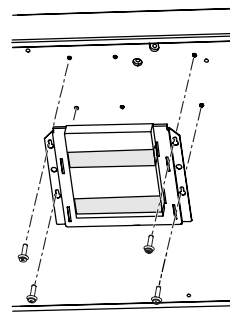

 6. Connect the CD drive's USB cable to the "External memory connector" or "FDD connector" of your digital piano.



7. Use the included cable clip to bundle the cable as necessary.

- \* Each time you use your digital piano, verify that the Velcro strap or screws have not become loose.
- \* If the Velcro should come lose after you've installed the holder, temporarily remove the holder from your digital piano, and re-fasten the CD drive with the Velcro strap.

### Attachment method B


5. Remove one of the rubber feet from the front left of the digital piano's bottom surface (see the illustration for step 7).

\* Use a Phillips driver to remove the rubber foot.

6. Move the headphone hook as necessary (see the illustration for step 7).


7. Using two of the included screws, fasten the holder (with the attached CD drive) to the bottom of your digital piano as shown in the illustration.

Fasten it securely so that it does not wobble.

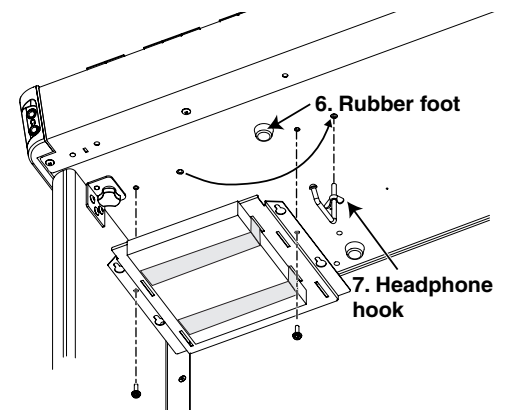

- \* Keep the included screws and the rubber foot you removed in a safe place so that they will not be swallowed by small children.

8. Connect the CD drive's USB cable to the "External memory connector" or "FDD connector" of your digital piano.

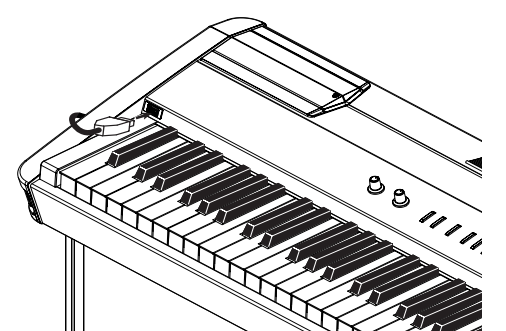

9. Use the included cable clip to bundle the cable as necessary.

- \* Each time you use your digital piano, verify that the Velcro strap or screws have not become loose.
- \* If the Velcro should come lose after you've installed the holder, temporarily remove the holder from your digital piano, and re-fasten the CD drive with the Velcro strap.