

Carrying Bag for the VP-550/SH-201 CB-49VP Owner's Manual

Before using this product, carefully read the sections entitled: "USING THE UNIT SAFELY" and "IMPORTANT NOTES." These sections provide important information concerning the proper operation of the product. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new product, the Owner's Manual should be read in its entirety. The manual should be saved and kept on hand as a convenient reference.

Dimensions

900 (W) x 380 (H) x 190 (D) mm
35-7/16 (W) x 15 (H) x 7-1/2 (D) inches

Materials

Nylon

Note: Please keep the total weight of any items placed in the carrying bag's outer pockets to less than 1.2 kg.

USING THE UNIT SAFELY	
INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS	
<p>About WARNING and CAUTION Notices</p> <p> WARNING Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.</p> <p> CAUTION Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly.</p> <p>* Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.</p>	<p>About the Symbols</p> <p> The symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.</p> <p> The symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.</p> <p> The symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.</p>

ALWAYS OBSERVE THE FOLLOWING

WARNING

- Before using this product, make sure to read the instructions below, and the Owner's Manual.

- Do not open or perform any internal modifications on the product.

- Do not attempt to repair the stand, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page.

- In households with small children, an adult should provide supervision until the child is capable of following all the rules essential for the safe operation of the product.

- Protect the product from strong impact. (Do not drop it!)

CAUTION

- This bag for use only with specific Roland VP-550 or SH-201. Do not use with other models.

IMPORTANT NOTES

In addition to the items listed under "USING THE UNIT SAFELY," please read and observe the following:

Placement

- Do not expose the product to direct sunlight, place it near devices that radiate heat, leave it inside an enclosed vehicle, or otherwise subject it to temperature extremes. Excessive heat can deform or discolor the product.

Maintenance

- For everyday cleaning wipe the product with a soft, dry cloth or one that has been slightly dampened with water. To remove stubborn dirt, use a cloth impregnated with a mild, non-abrasive detergent. Afterwards, be sure to wipe the product thoroughly with a soft, dry cloth. Do not launder or wash the entire bag.
 - Never use benzine, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.
- * In the interest of product improvement, the specifications, appearance and/or contents of this unit are subject to change without prior notice.