

# Read This First

## PDX-8 Snare Settings Required

Use of the setup without the following may prevent the PDX-8's rim shots from sounding, cause double triggering, or result in other problems.

### 1. Tune the Head

### 2. Make the Settings for the Trigger Parameters

Make the trigger parameter settings with the TD-6V percussion sound module. Follow the procedures below.

\* The TD-6V's default factory settings are not suitable for use with the PDX-8.

Trigger Parameter	Value
Trigger Basic (TRIG BASIC)	Trigger Type (TrigTyp) PD-80R
Trigger Advanced (TRIG ADVNCD)	Mask Time 8ms
	Rim Sens 11 (8–13) (*1: See below.)

### 3. Adjust the "Rim Sens" (\*1)

If you find the following kinds of problems occurring, adjust the "Rim Sens."

- If you hear a rim sound when you strike the head, decrease the "Rim Sens" value.
- If you cannot get a rim sound even when you strike the rim hard, increase the "Rim Sens" value.

#### How To Set the Trigger Parameters ( TD-6V Owner's Manual; p. 69 )

1. Press [SHIFT] + [EDIT (SETUP)] on the TD-6KV.
2. Strike the PDX-8.  
The trigger input 2 (SNARE) is selected.
3. Press [▶] select "TRIG BASIC" or "TRIG ADVNCD."
4. Press [ENTER □].
5. Press [◀] or [▶] to select the parameter ("TrigTyp", "Mask Time", "Rim Sens", etc.).
6. Press [+/-] to make the setting.
7. Press [KIT]; the [EDIT (SETUP)] light goes off.

