

# Roland®

**Roland Drum System  
V-Compact® series**



# TD-3KW

## Owner's Manual

Thank you, and congratulations on your choice of the Roland Drum System TD-3KW.

Before using this unit, carefully read the sections entitled: "USING THE UNIT SAFELY" and "IMPORTANT NOTES" (p. 2, p. 3). These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new unit, Owner's manual should be read in its entirety. The manual should be saved and kept on hand as a convenient reference.





*\* For the Snare (PDX-8) to function correctly, trigger parameters in the sound module TD-3 must be adjusted.*



Copyright © 2006 ROLAND CORPORATION

All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.







# USING THE UNIT SAFELY

## INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About  **WARNING** and  **CAUTION** Notices







 <b>WARNING</b>	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
 <b>CAUTION</b>	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols





	The  symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The  symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The  symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

### ALWAYS OBSERVE THE FOLLOWING




#### **WARNING**

- Before using this unit, make sure to read the instructions below, and the Owner's Manual. 
- Do not open or perform any internal modifications on the unit. (The only exception would be where this manual provides specific instructions which should be followed in order to put in place user-installable options; see p. 7.) 
- Do not attempt to repair the unit, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page. 
- Never use or store the unit in places that are:
  - Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are 
  - Damp (e.g., baths, washrooms, on wet floors); or are 
  - Humid; or are
  - Exposed to rain; or are
  - Dusty; or are
  - Subject to high levels of vibration.
- This unit should be used only with a rack or stand that is recommended by Roland. 

#### **WARNING**

- When using the unit with a rack or stand recommended by Roland, the rack or stand must be carefully placed so it is level and sure to remain stable. If not using a rack or stand, you still need to make sure that any location you choose for placing the unit provides a level surface that will properly support the unit, and keep it from wobbling. 
- Do not allow any objects (e.g., flammable material, coins, pins); or liquids of any kind (water, soft drinks, etc.) to penetrate the unit. 
- In households with small children, an adult should provide supervision until the child is capable of following all the rules essential for the safe operation of the unit. 
- Do not drop it! 

#### **CAUTION**

- Try to prevent cords and cables from becoming entangled. Also, all cords and cables should be placed so they are out of the reach of children. 
- Never climb on top of, nor place heavy objects on the unit. 
- Should you remove nuts, washers, screws, anchor bolts, etc., keep them in a safe place out of children's reach, so there is no chance of them being swallowed accidentally. 

## IMPORTANT NOTES

In addition to the items listed under “USING THE UNIT SAFELY” on page 2, please read and observe the following:

### Placement

- Do not expose the unit to direct sunlight, place it near devices that radiate heat, leave it inside an enclosed vehicle, or otherwise subject it to temperature extremes. Excessive heat can deform or discolor the unit.
- Do not allow rubber, vinyl, or similar materials to remain on the unit for long periods of time. Such objects can discolor or otherwise harmfully affect the finish.

### Maintenance

- For everyday cleaning wipe the unit with a soft, dry cloth or one that has been slightly dampened with water. To remove stubborn dirt, use a cloth impregnated with a mild, non-abrasive detergent. Afterwards, be sure to wipe the unit thoroughly with a soft, dry cloth.
- Never use benzine, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

### Additional Precautions

- Use a reasonable amount of care when using the unit’s buttons, sliders, or other controls; and when using its jacks and connectors. Rough handling can lead to malfunctions.
- When connecting / disconnecting all cables, grasp the connector itself—never pull on the cable. This way you will avoid causing shorts, or damage to the cable’s internal elements.
- To avoid disturbing your neighbors, try to keep the unit’s volume at reasonable levels. You may prefer to use headphones, so you do not need to be concerned about those around you (especially when it is late at night).
- This instrument is designed to minimize the extraneous sounds produced when it’s played. However, since sound vibrations can be transmitted through floors and walls to a greater degree than expected, take care not to allow these sounds to become a nuisance to neighbors, especially when performing at night and when using headphones.
- The rubber portion of the striking surface is treated with a preservative to maintain its performance. With the passage of time, this preservative may appear on the surface as a white stain, or reveal how the pads were struck during product testing. This does not affect the performance or functionality of the product, and you may continue using it with confidence.

## Checking the Contents of the Box

- ❑ TD-3 (Percussion Sound Module) x 1
- ❑ KD-8 (Kick Trigger Pad) x 1
- ❑ FD-8 (Hi-Hat Control Pedal) x 1
- ❑ PDX-8 (V-Pad) x 1
- ❑ PD-8 (Pad) x 3
- ❑ CY-5 (Cymbal Pad) x 1
- ❑ CY-8 (Cymbal Pad) x 2
- ❑ Connection Cables
- ❑ Tuning Key x 1
- TD-3KW Owner's Manual x 1
- ❑ PLAY-ALONG AUDIO CD Set x 1
  - ❑ PLAY-ALONG AUDIO CD
  - ❑ Connection Cable (stereo miniature phone type)

### MEMO

- The tuning key is included in the FD-8 package.
- The TD-3 Owner's Manual is included in the TD-3 package.
- This package does not include a kick pedal. Use with a commercially available kick pedal.
- This package does not include the CY-5 attachment set for cymbal.

\* In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.

## MDS-3C (Drum Stand)


Assemble the Drum Stand.



About the Stand, refer to the owner's manual for the stand.

### NOTE

Do NOT open the legs of the stand at more than 120 degrees, and NOT make the distance of both Right/Left end legs as more than 90cm (36 inches). If you do so, the stand could fall down.

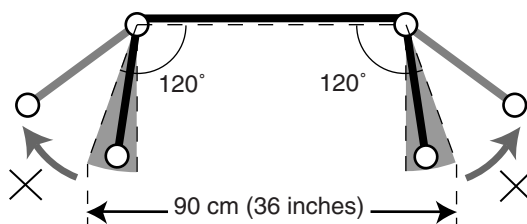


## TD-3 (Percussion Sound Module)

Attach the mounting plate (included with the optional drum stand) to the TD-3.


Using the screws attached to the bottom panel, attach the holder so the unit is oriented as shown in the diagram.

### NOTE





- To attach the stand holder, remove the four 8 mm screws (M5 x 8) from the bottom of the TD-3 and use them. Use of other screws may result in damage to the unit.
- When turning the unit upside-down, get a bunch of newspapers or magazines, and place them under the four corners or at both ends to prevent damage to the buttons and controls. Also, you should try to orient the unit so no buttons or controls get damaged.
- When turning the unit upside-down, handle with care to avoid dropping it, or allowing it to fall or tip over.

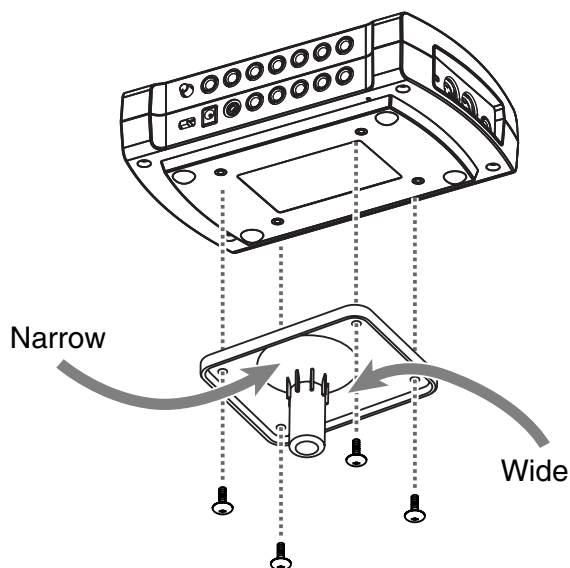

## PDX-8 (Snare)

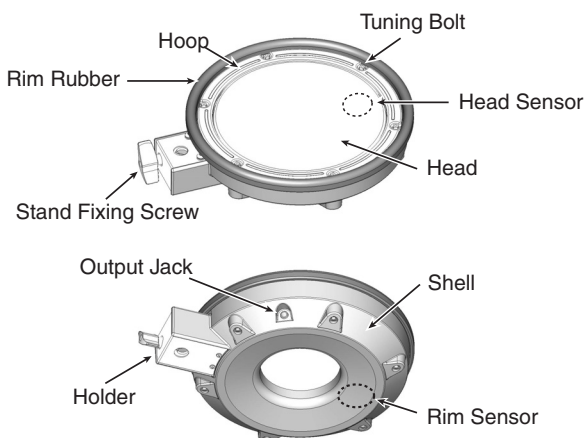

\* Do NOT place your fingers inside the shell, as you may hurt yourself or cause damage to the PDX-8. Or when changing the head, do NOT touch any of the internal parts. Also, do not insert your fingers into the hole of the mounting bracket.

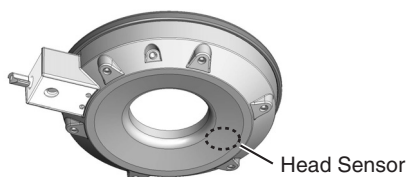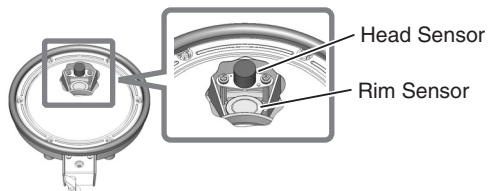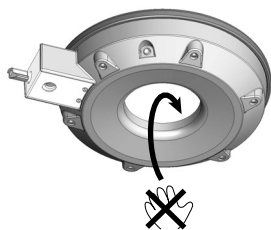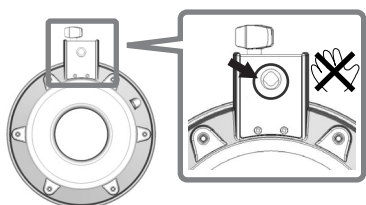

## Adjusting the Head Tension

**Before using the pad, tighten the head so that the tension is rather firm.**


Looseness in the head tension may result in problems such as failure of the PDX-8's rim shots to sound or double triggering.

### NOTE

Striking the head when the head tension is loose may damage the sensor.


### 1. Use a tuning key to tighten the tuning bolts.

Strike the head to check the feel and response.

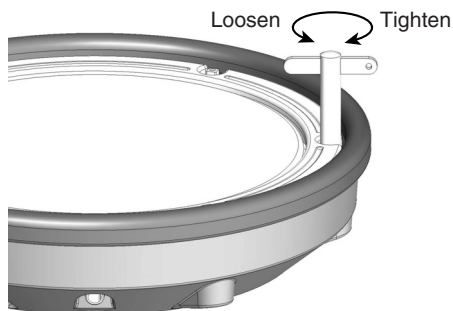

### NOTE

Tighten each tuning bolt one by one, observing the numerical order shown in the diagram. Do not firmly tighten a single tuning bolt by itself. Doing so will make it impossible to tension the head evenly, and will cause malfunctions.

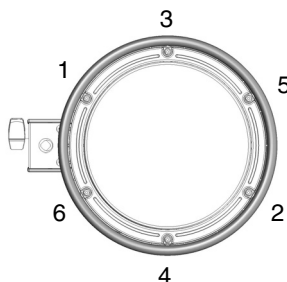

### 2. Fine-tune the adjustment while continuing to check the pad feel and response.

### MEMO


- On the PDX-8, adjusting the head tension affects only the head response, and does not change the pitch of the sound as it would on an acoustic drum.
- Head tension may slacken with the passage of time. Readjust the tension as needed.

## Attaching the Pad to a Stand

Attach the PDX-8 to a pad mount of the stand.


### NOTE

Be sure to tighten the stand fixing screw secure. If it remain loose, double triggering may occur.

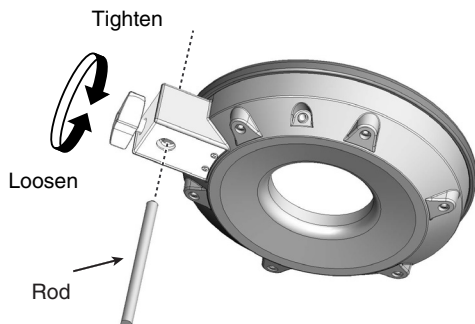


## Playing Methods

### Head Shots

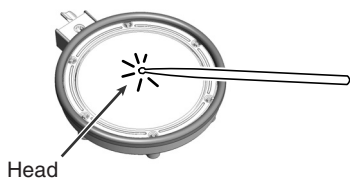


\* Do not strike the hoop.

### Rim Shots

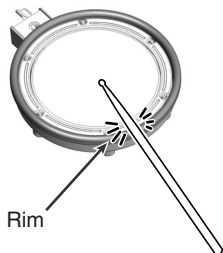


\* To play rim shots, strike the rim in the area shown in the diagram.

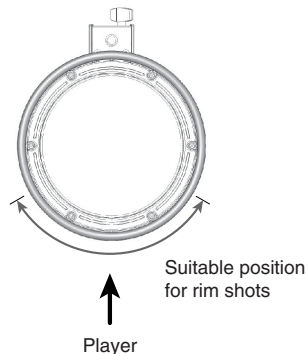

### Cross Stick

Only strike the rim of the pad.

Depending on the instrument assigned to the rim, you can play rim shots and/or cross stick sounds.

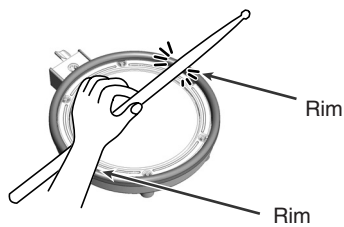

\* To play the cross stick, be sure that you only strike the rim of the pad. Placing your hand on the head of the pad might prevent the cross stick sound from being played properly.

### MEMO

For more on settings and tones, see the respective module's owner's manual.

### HINT

If you hear a rim sound when you strike the head, decrease the "Rim Sensitivity (rns)" value.  
If you cannot get a rim sound even when you strike the rim hard, increase the "Rim Sensitivity (rns)" value.

## Head Replacement


### When the Head Should Be Replaced

The head is an expendable item that eventually will wear out and need to be replaced. Replace the head when the following occurs:

Slack portions remain in the head even when the head tension is properly adjusted.

**Replacement heads (optional): MH-8 Mesh Head**

#### 1. Remove all tuning bolts from the PDX-8.

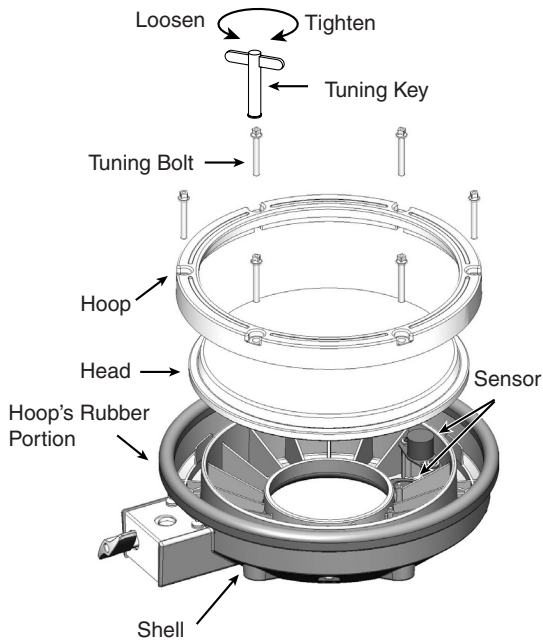

#### NOTE

Do not apply excessive force to the sensor and cushion located under the head. Doing so can interfere with accurate detection, and may damage it.

2. Remove the hoop.
3. Remove the old head.
4. Place the new head on the shell.
5. Place the hoop onto the head.
6. Attach the tuning bolts to the hoop and shell.
7. Next, adjust the tension of the head. Refer to "Adjusting the Head Tension" (p. 5).

#### NOTE

Do not firmly tighten a single tuning bolt by itself. Doing so will make it impossible to tension the head evenly, and will cause malfunctions.

## Specifications


### PDX-8

Head Size:	8 inches
Triggers:	2 (Head, Rim)
Dimensions:	266 (W) x 326 (D) x 62 (H) mm 10-1/2 (W) x 12-7/8 (D) x 2-1/2 (H) inches
Weight:	1.3 kg 2 lbs 14 oz
Options:	Mesh Head (MH-8)


\* The Rim rubber is one component that eventually wears out (the more so if numerous rim shots are performed), and will require replacement. Rim shots may not be performed correctly when the rim rubber is worn out. If this occurs, replace the rim rubber. Consult Roland Service for more on replacing the rim rubber.

\* Due to the nature of the materials used in the sensor, changes in room temperature may affect the sensitivity of the sensor.

## PD-8 (Tom)

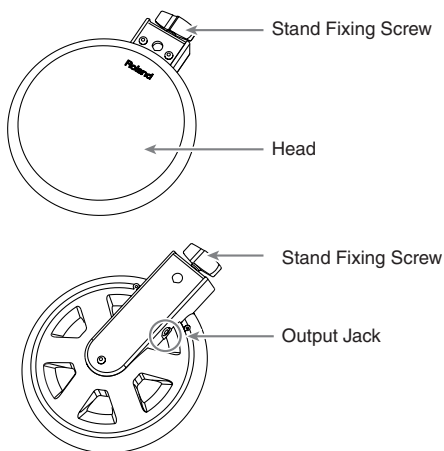

## Attaching the Pad to a Stand

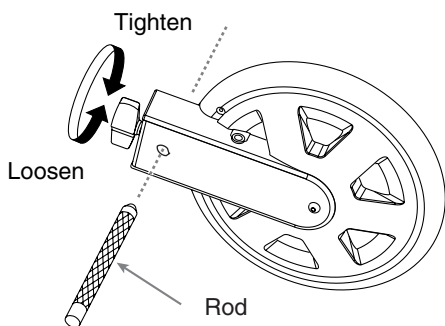


Pass the rod through the pipe that is inside the holder.

### NOTE

When attaching the PD-8s to the mounts, be sure to tighten the stand fixing screws securely. If any of them remain loose, the pad could fall off.

## Playing the PD-8

### Head Shot

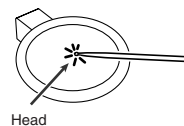

## Specifications

### PD-8

Pad Size: 8.5 inches

Triggers: 2 (Head, Rim)

Dimensions: 226 (W) x 280 (D) x 54 (H) mm


8-15/16 (W) x 11-1/16 (W) x 2-1/8 (H) inches

Weight: 1.2 kg

2 lbs 11 oz




## CY-5 (Hi-Hat)

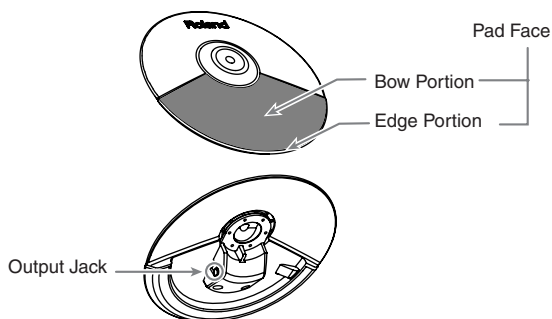


### Making the Settings

When mounting the CY-5 on an L-Rod (pad mount), use **ONLY** the attachment set as shown below.

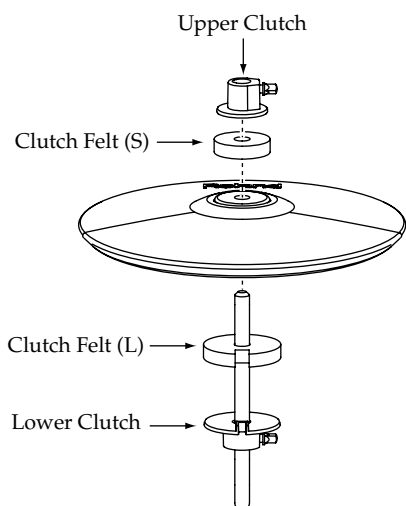


#### 1. Mounting the lower clutch and the clutch felt (L).

Align the notched section as shown below. Then place the clutch felt (L) so it fits securely.

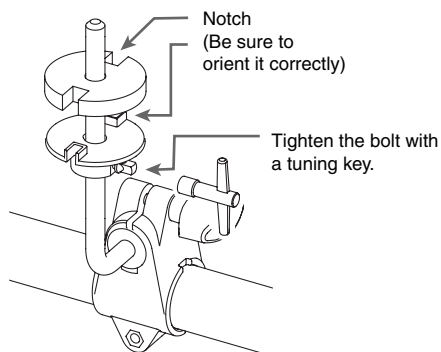


#### 2. Mount the CY-5 so it fits the lower clutch as shown below.

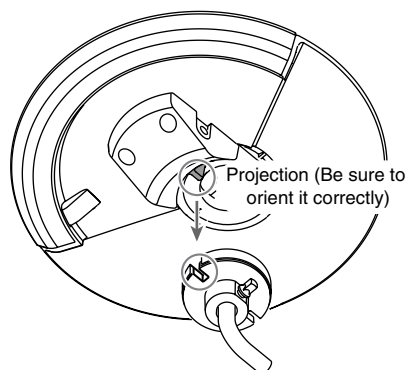

#### 3. Place the clutch felt (s), and while applying some pressure, mount the upper clutch as shown.

Afterwards, you can adjust the upper clutch to have the movement you desire. If it is too loose, double triggering may occur.

Be sure the ROLAND logo is on the opposite side of the playing area.

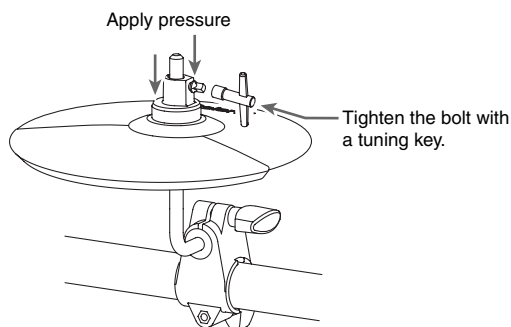


### Specifications

#### CY-5

- Size: 10 inches
- Triggers: 2 (Bow, Edge)
- Dimensions: 246 (W) x 246 (D) x 45 (H) mm  
9-11/16 (W) x 9-11/16 (D) x 1-13/16 (H) inches
- Weight: 380 g  
14 oz (without attachment)
- Accessories: Attachment Set for Hi-Hat (Upper Clutch, Lower Clutch, Clutch Felt (L), Clutch Felt (S))

\* Continuous playing may cause dis-coloration of the pad, but this will not affect the Pad's function.


## CY-8 (Crash Cymbal/Ride Cymbal)

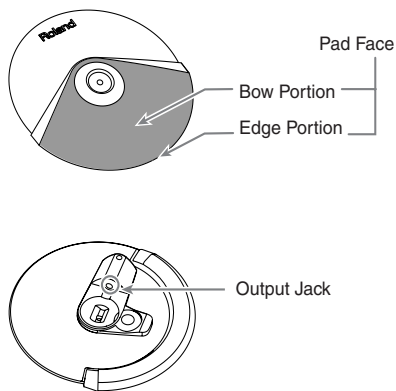

### Attaching the Cymbal Pad to a Stand

#### 1. Use a tuning key to tighten the stopper bolt.


The stopper keeps the cymbal pad from turning, and prevents the cables from catching or getting tangled on the stand.

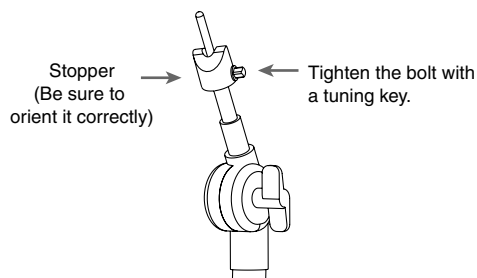

#### 2. Attach the CY-8 so the Roland logo is positioned on the opposite side of the playing area.

#### 3. Tighten the wing nut to obtain the desired movement.

Use the included felt washer and the wing nut.

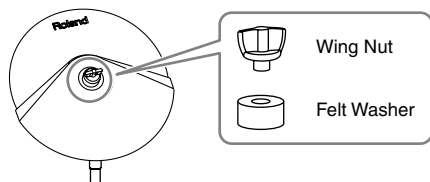


#### NOTE

Double sounding may occur if the wing nut is loose.

### Playing the CY-8

#### Bow Shot


This is the most common playing method, playing the pad face of the cymbal. It corresponds to the sound of the "head-side" of the connected trigger input.

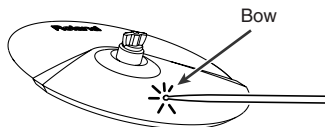

#### Edge Shot

This playing method involves striking the edge with the shoulder of the stick. It corresponds to the sound of the "rim-side" of the connected trigger input.


\* To make use of edge shot, you'll need to connect to a trigger input jack on the percussion sound module that accommodates rim shots.

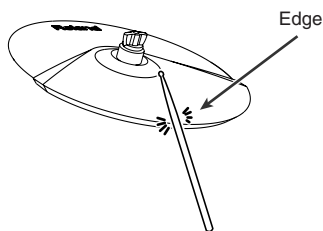

#### Choking

Choking (pinching) the cymbal's edge with the hand immediately after hitting the cymbal makes the sound stop.

\* To make use of choking play techniques, you'll need to connect to a trigger input jack on the percussion sound module that accommodates rim shots.

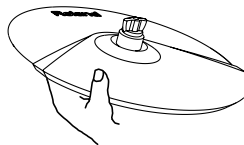

### Specifications

#### CY-8



Size:	12 inches
Triggers:	2 (Bow, Edge)
Dimensions:	290 (W) x 295 (D) x 47 (H) mm 11-7/16 (W) x 11-5/8 (D) x 1-7/8 (H) inches
Weight:	650 g / 1 lb 7 oz
Accessories:	Wing Nut, Felt Washer, Stopper

\* Continuous playing may cause dis-coloration of the pad, but this will not affect the Pad's function.


## FD-8 (Hi-Hat Control Pedal)

### Adjusting the Travel of the Pedal

Loosen the nut with a tuning key.  
After adjusting, tighten the nut.

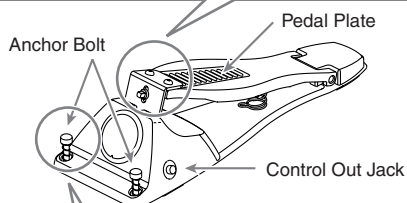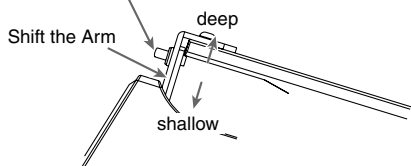

### Attaching the Anchor Bolts (When Using on the Carpet)

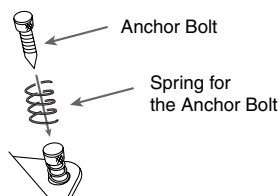

### NOTE

- The tips of the anchor bolts are sharp. Handle with care.
- When using on flooring, the anchor bolts may damage the floor. Do not attach the anchor bolts.
- When the FD-8 is not going to be used for a long period of time, move and fix the arm, allowing longer travel for the pedal.
- To avoid damage, do not leave the FD-8 for extended periods of time with the pedal plate depressed.

## Using the FD-8

Using the FD-8, you can control the opening and closing of the hi-hat sound.

### Open Hi-Hat

Strike the hi-hat without pressing the pedal

### Half Open Hi-Hat

Strike the hi-hat with the pedal pressed half-way

### Closed Hi-Hat

Strike the hi-hat with the pedal pressed

### Foot Closed

Completely press down the pedal

### HINT

The volume of the Foot Closed sound can be adjusted separately (TD-3 Owner's Manual; p. 42).

### NOTE

- Connect the FD-8 to the TD-3 before turning on the power.
- Do NOT press the pedal when turning on the power.

## Specifications


### FD-8

Dimensions: 130 (W) x 396 (D) x 103 (H) mm  
5-1/8 (W) x 15-5/8 (D) x 4-1/16 (H) inches

Weight: 1.3 kg  
2 lbs 14 oz


Accessory: Tuning Key

## KD-8 (Kick)

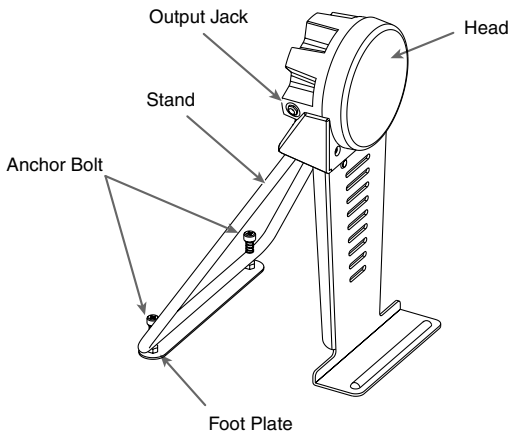


### Making the Settings


1. Remove the screws attached to the reverse side of the KD-8's trigger.

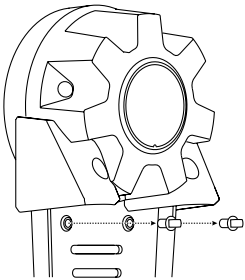

2. Pull out the stand in the direction indicated by the arrow until it is fully extended.

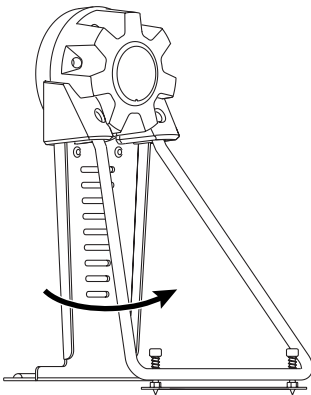


3. Use a tuning key supplied with the FD-8 to tighten the screws removed in Step 1 so that the stand is firmly secured.

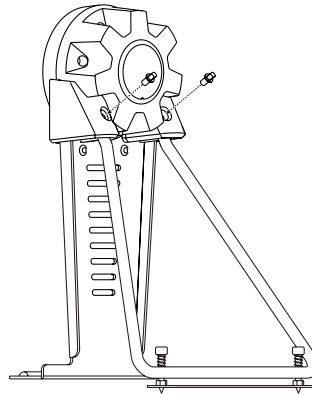


4. Attach the kick pedal.

Position the beater so that it strikes the center of the head, then secure the kick pedal and KD-8 firmly in place.

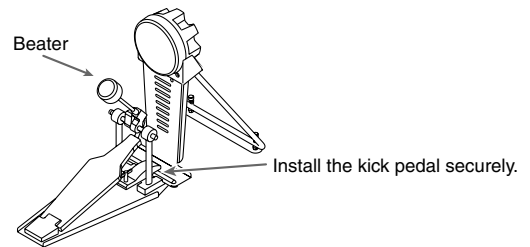


### Adjusting the Foot Plate Height

Depending on your kick pedal, it can be unstable when you attach it to the KD-8. Be sure to adjust the foot plate height so that the entire bottom surface of the pedal is attached to the floor.

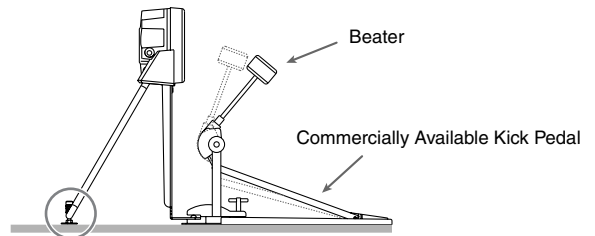


\* Adjust the height so that the entire pedal comes into contact with the floor.

1. Loosen the stand's anchor bolts and remove the foot plate.

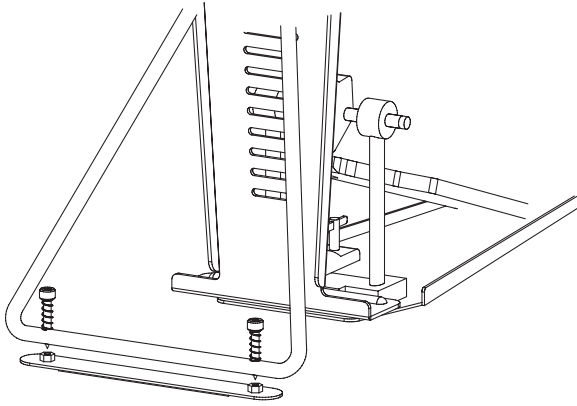

2. Set the kick pedal so that the entire bottom surface is attached to the floor.
3. In most cases, the stand becomes somewhat floated. Tighten the anchor bolts securely there to fix the stand and foot plate.

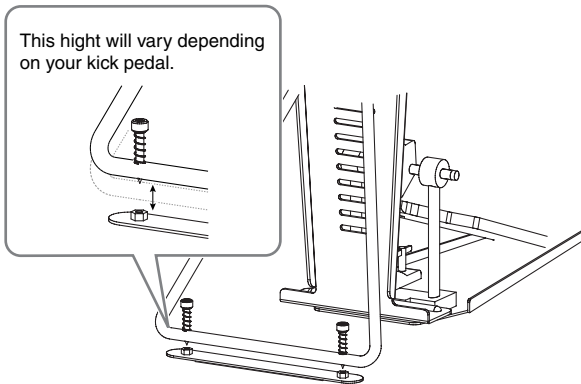

**NOTE**

- Install the kick pedal securely.
- Take care not to pinch your fingers.
- The tips of the anchor bolts are sharp. Handle with care.
- When moving the setup, be sure to remove the screws and fold the stand. Transporting the KD-8 while it remains open may subject the stand to excessive strain and result in damage to the stand.

## Adjusting the Anchor Bolts

When using the kick pedal on a carpet or similar surface, adjust the anchor bolts so their tips protrude from the plate and secure the pedal in place; this will make it easier to use the kick pedal.

However, when used on flooring, the anchor bolts may damage the floor. Adjust the anchor bolts correctly.


### Adjusting the Anchor Bolts




**NOTE**

The tips of the anchor bolts are sharp. Handle with care.

## When Using a Twin Pedal

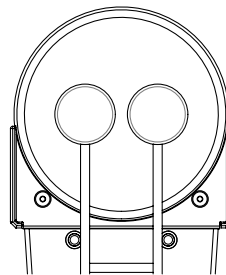

Position the two beaters equally apart from the center of the pad as shown in the figure at left. If one of the beater is further away from the center than the other, the sound from the further beater will be lower in volume, or will not sound as desired.

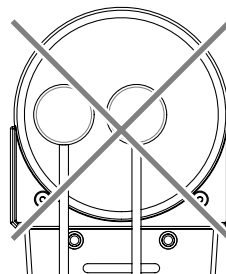

Using a twin pedal will result in lower sensitivity as compared to when a single pedal is used. Raise the sensitivity on the sound module.

## Specifications

**KD-8**

Dimensions: 272 (W) x 260 (D) x 405 (H) mm  
10-3/4 (W) x 10-1/4 (D) x 16 (H) inches

Weight: 2.9 kg  
6 lbs 7 oz

Accessory: Screws

\* Continuous playing may cause dis-coloration of the pad, but this will not affect the Pad's function.


## Assemble the "TD-3KW"

Using the provided cables, connect the pads.

Connect the L-shaped plugs of the included cables to the pads.


### NOTE

To prevent malfunction and/or damage to speakers or other devices, always turn down the volume, and turn off the power on all devices before making any connections.

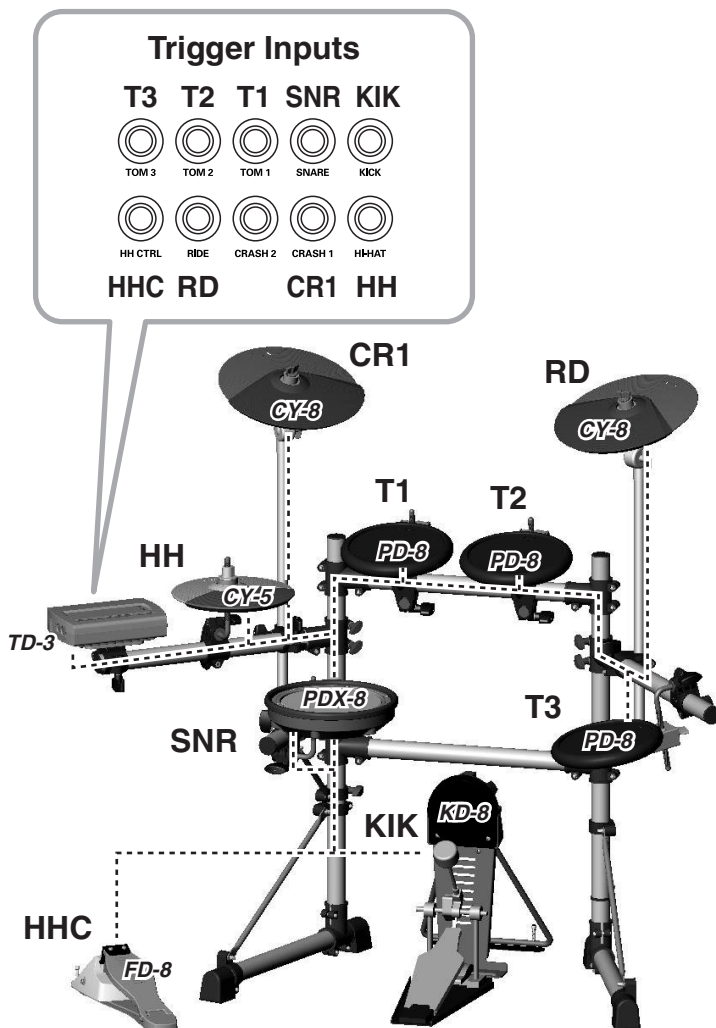

1. Insert the plugs of connecting cables into the TRIGGER INPUTS jacks on the rear of the TD-3.
2. Insert the L-shaped plugs into the TRIGGER OUTPUTS jacks of the pads.

\* When you connect the cables, please refer to the labels that are attached to both ends of the cables.

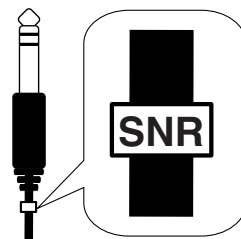

## Trigger Settings For TD-3

**For the Snare (PDX-8) to function correctly, trigger parameters in the sound module TD-3 must be adjusted.**

For more detailed informations, refer to the TD-3 Owner's Manual.

## Adding the Optional Pads to the TD-3KW

When adding a new pad, use trigger input CRASH2.

### Examples

#### Adding a Cymbal

Adding the CY-8 or the CY-5 for a 2nd Crash or a Splash Cymbal. For mounting, use the Cymbal Mount MDY-10U.

#### Adding a Tom

Adding the PD-8 for a 2nd floor tom. For mounting, use the Pad Mount MDH-10U.

### Options

Kick Trigger Pad:	KD-8, KD-7
V-Kick Trigger Pad:	KD-85, KD-120
Dual Trigger Pad:	PD-8
V-Pad:	PDX-8, PD-85, PD-105, PD-125
Cymbal Pad:	CY-8, CY-5
V-Cymbal:	CY-12R/C, CY-14C, CY-15R
Pad Mount:	MDH-10U
Cymbal Mount:	MDY-10U

# Information

When you need repair service, call your nearest Roland Service Center or authorized Roland distributor in your country as shown below.

## AFRICA

### EGYPT

**Al Fanny Trading Office**  
9, EBN Hagar Al Askalany  
Street,  
ARD El Golf, Heliopolis,  
Cairo 11341, EGYPT  
TEL: 20-2-417-1828

### REUNION

**Maison FO - YAM Marcel**  
25 Rue Jules Hermann,  
Chaudron - BP79 97 491  
Ste Clotilde Cedex,  
REUNION ISLAND  
TEL: (0262) 218-429

### SOUTH AFRICA

**T.O.M.S. Sound & Music**  
(Pty)Ltd.  
2 ASTRON ROAD DENVER  
JOHANNESBURG ZA 2195,  
SOUTH AFRICA  
TEL: (011)417 3400

**Paul Bothner(Pty)Ltd.**  
Royal Cape Park, Unit 24  
Londonderry Road, Ottery 1700  
Cape Town, SOUTH AFRICA  
TEL: (021) 799 4900

## ASIA

### CHINA

**Roland Shanghai Electronics**  
Co.,Ltd.  
5F, No.1500 Pingliang Road  
Shanghai 200090, CHINA  
TEL: (021) 5580-0800

**Roland Shanghai Electronics**  
Co.,Ltd.  
**(BEIJING OFFICE)**  
10F, No.18 3 Section Anhuaxili  
Chaoyang District Beijing  
100011 CHINA  
TEL: (010) 6426-5050

### HONG KONG

**Tom Lee Music Co., Ltd.**  
Service Division  
22-32 Pun Shan Street, Tsuen  
Wan, New Territories,  
HONG KONG  
TEL: 2415 0911

### Parsons Music Ltd.

8th Floor, Railway Plaza, 39  
Chatham Road South, T.S.T.,  
Kowloon, HONG KONG  
TEL: 2333 1863

### INDIA

**Rivera Digitec (India) Pvt. Ltd.**  
411, Nirman Kendra  
Mahalaxmi Flats Compound  
Off. Dr. Edwin Moses Road,  
Mumbai-400011, INDIA  
TEL: (022) 2493 9051

### INDONESIA

**PT Citra IntiRama**  
Jl. Cideng Timur No. 15J-150  
Jakarta Pusat  
INDONESIA  
TEL: (021) 6324170

### KOREA

**Cosmos Corporation**  
1461-9, Seocho-Dong,  
Seocho Ku, Seoul, KOREA  
TEL: (02) 3486-8855

### MALAYSIA

**Roland Asia Pacific Sdn. Bhd.**  
45-1, Block C2, Jalan PJU 1/39,  
Dataran Prima, 47301 Petaling  
Jaya, Selangor, MALAYSIA  
TEL: (03) 7805-3263

### VIET NAM

**Suoi Nhap Company, Ltd**  
370 Cach Mang Thang Tam St.  
Dist.3, Ho Chi Minh City,  
VIET NAM  
TEL: 9316540

## PHILIPPINES

**G.A. Yupangco & Co. Inc.**  
339 Gil J. Puyat Avenue  
Makati, Metro Manila 1200,  
PHILIPPINES  
TEL: (02) 899 9801

## SINGAPORE

**SWEET LEE MUSIC**  
**COMPANY PTE. LTD.**  
150 Sims Drive,  
SINGAPORE 387381  
TEL: 6846-3676

## TAIWAN

**ROLAND TAIWAN**  
**ENTERPRISE CO., LTD.**  
Room 5, 9fl. No. 112 Chung  
Shan N. Road Sec.2, Taipei,  
TAIWAN, R.O.C.  
TEL: (02) 2561 3339

## THAILAND

**Theera Music Co., Ltd.**  
330 Soi Verng NakornKasem,  
New Road, Sumpantawongse,  
Bangkok 10100, THAILAND  
TEL: (02) 224-8821

## AUSTRALIA/ NEW ZEALAND

### AUSTRALIA/ NEW ZEALAND

**Roland Corporation**  
**Australia Pty., Ltd.**  
38 Campbell Avenue  
Dee Why West, NSW 2099  
AUSTRALIA

For Australia  
Tel: (02) 9982 8266  
For New Zealand  
Tel: (09) 3098 715

## CENTRAL/LATIN AMERICA

### ARGENTINA

**Instrumentos Musicales S.A.**  
Av. Santa Fe 2055  
(1123) Buenos Aires  
ARGENTINA  
TEL: (011) 4508-2700

### BARBADOS

**A&B Music Supplies LTD**  
12 Webster Industrial Park  
Wildely, St.Michael, Barbados  
TEL: (246)430-1100

### BRAZIL

**Roland Brasil Ltda.**  
Rua San Jose, 780 Sala B  
Parque Industrial San Jose  
Cotia - Sao Paulo - SP, BRAZIL  
TEL: (011) 4615 5666

### CHILE

**Comercial Fancy II S.A.**  
Rut: 96.919.420-1  
Natiel Cox #739, 4th Floor  
Santiago - Centro, CHILE  
TEL: (02) 688-9540

### COLOMBIA

**Centro Musical Ltda.**  
Cra 43 B No 25 A 41 Bododega 9  
Medellin, Colombia  
TEL: (574)3812529

### COSTA RICA

**JUAN Bansbach Instrumentos**  
**Musicales**  
Ave.1. Calle 11, Apartado  
10237,  
San Jose, COSTA RICA  
TEL: 258-0211

## CURACAO

**Zelandia Music Center Inc.**  
Orionweg 30  
Curacao, Netherland Antilles  
TEL:(305)5926866

## DOMINICAN REPUBLIC

**Instrumentos Fernando Giráldez**  
Calle Proyecto Central No.3  
Ens. La Esperilla  
Santos Domingo,  
Dominican Republic  
TEL:(809) 683 0305

## ECUADOR

**Mas Musica**  
Rumichaca 822 y Zaruma  
Guayaquil - Ecuador  
TEL:(593-4)2302364

## EL SALVADOR

**OMNI MUSIC**  
75 Avenida Norte y Final  
Alameda Juan Pablo II,  
Edificio No.4010 San Salvador,  
EL SALVADOR  
TEL: 262-0788

## GUATEMALA

**Casa Instrumental**  
Callezada Roosevelt 34-01, zona 11  
Ciudad de Guatemala  
Guatemala  
TEL:(502) 599-2888

## HONDURAS

**Almacen Pajaro Azul S.A. de C.V.**  
BO.Paz Barahona  
3 Ave.11 Calle S.O  
San Pedro Sula, Honduras  
TEL: (504) 553-2029

## MARTINIQUE

**Musique & Son**  
Z.I. Les Mangle  
97232 Le Lamentin  
Martinique F.W.I.  
TEL: 596 596 426860

## Gigamusic S.A.RL

10 Rte De La Folie  
97200 Fort De France  
Martinique F.W.I.  
TEL: 596 596 715222

## MEXICO

**Casa Veerkamp, s.a. de c.v.**  
Av. Toluca No. 323, Col. Olivar  
de los Padres 01780 Mexico  
D.F. MEXICO  
TEL: (55) 5668-6699

## NICARAGUA

**Bansbach Instrumentos**  
**Musicales Nicaragua**  
Altamira D'Este Calle Principal  
de la Farmacia 5ta.Avenida  
1 Cuadra al Lago.#503  
Managua, Nicaragua  
TEL: (505)277-2557

## PANAMA

**SUPRO MUNDIAL, S.A.**  
Boulevard Andrews, Albrook,  
Panama City, REP. DE  
PANAMA  
TEL: 315-0101

## PARAGUAY

**Distribuidora De**  
**Instrumentos Musicales**  
J.E. Oleary y ESQ. Manduvira  
Asuncion PARAGUAY  
TEL: (595) 21 492147

## PERU

**Audionet**  
Distribuciones Musicales SAC  
Juan Fanning 530  
Miraflores  
Lima - Peru  
TEL: (51) 4461388

## TRINIDAD

**AMR Ltd**  
Ground Floor  
Maritime Plaza  
Barataria Trinidad W.I.  
TEL: (868) 638 6385

## URUGUAY

**Todo Musica S.A.**  
Francisco Acuna de Figueroa  
1771  
C.P.: 11.800  
Montevideo, URUGUAY  
TEL: (02) 924-2335

## VENEZUELA

**Instrumentos Musicales**  
**Allegro,C.A.**  
Av. las industrias edf.Guitar  
import  
#7 zona Industrial de Turumo  
Caracas, Venezuela  
TEL: (212) 244-1122

## EUROPE

### AUSTRIA

**Roland Elektronische**  
**Musikinstrumente HmbH.**  
Austrian Office  
Eduard-Bodem-Gasse 8,  
A-6020 Innsbruck, AUSTRIA  
EL SALVADOR  
TEL: (021) 26 44 260

### BELGIUM/FRANCE/ HOLLAND/ LUXEMBOURG

**Roland Central Europe N.V.**  
Houtstraat 3, B-2260, Oevel  
(Westerlo) BELGIUM  
TEL: (014) 575811

### CROATIA

**ART-CENTAR**  
Degenerova 3,  
HR - 10000 Zagreb  
TEL: (1) 466 8493

### CZECH REP.

**CZECH REPUBLIC**  
**DISTRIBUTOR S.r.o**  
Vocáárova 247/16  
CZ - 180 00 PRAHA 8,  
CZECH REP.  
TEL: (2) 830 20270

### DENMARK

**Roland Scandinavia A/S**  
Nordhavnsvej 7, Postboks 880,  
DK-2100 Copenhagen  
DENMARK  
TEL: 3916 6200

### FINLAND

**Roland Scandinavia As, Filial**  
Finland  
Elannontie 5  
FIN-01510 Vantaa, FINLAND  
TEL: (09) 68 24 020

### GERMANY

**Roland Elektronische**  
**Musikinstrumente HmbH.**  
Oststrasse 96, 22844  
Norderstedt, GERMANY  
TEL: (040) 52 60090

### GREECE/CYPRUS

**STOLLAS S.A.**  
**Music Sound Light**  
155, New National Road  
Patras 26442, GREECE  
TEL: 2610 435400

### HUNGARY

**Roland East Europe Ltd.**  
Warehouse Area "DEPO" Pf.83  
H-2046 Torokbalint,  
HUNGARY  
TEL: (23) 511011

### IRELAND

**Roland Ireland**  
G2 Calmout Park, Calmout  
Avenue, Dublin 12  
Republic of IRELAND  
TEL: (01) 4294444

### ITALY

**Roland Italy S. p. A.**  
Viale delle Industrie 8,  
20020 Arese, Milano, ITALY  
TEL: (02) 937-78300

## NORWAY

**Roland Scandinavia Avd.**  
**Kontor Norge**  
Lilleakerveien 2 Postboks 95  
Lilleaker N-0216 Oslo  
NORWAY  
TEL: 2273 0074

## POLAND

**ROLAND POLSKA SP. Z O.O.**  
UL. Gibraltarska 4,  
PL-03 664 Warszawa  
POLAND  
TEL: (022) 679 4419

## PORTUGAL

**Roland Iberia, S.L.**  
Portugal Office  
Cais das Pedras, 8/9-1 Dto  
4050-465, Porto, PORTUGAL  
TEL: 22 608 00 60

## ROMANIA

**FBS LINES**  
Piata Libertatii 1,  
535500 Gheorgheni,  
ROMANIA  
TEL: (266) 364 609

## RUSSIA

**MuTeK**  
Dorozhnaya ul.3, korp.6  
117 545 Moscow, RUSSIA  
TEL: (095) 981-4967

## SLOVAKIA

**DAN Acoustic s.r.o.**  
Povazská 18,  
SK - 940 01 Nové Zámky  
TEL: (035) 6424 330

## SPAIN

**Roland Iberia, S.L.**  
Paseo Garcia Faria, 33-35  
08005 Barcelona SPAIN  
TEL: 93 493 91 00

## SWEDEN

**Roland Scandinavia A/S**  
**SWEDISH SALES OFFICE**  
Danvik Center 28, 2 Tr.  
S-131 30 Nacka SWEDEN  
TEL: (08) 702 00 20

## SWITZERLAND

**Roland (Switzerland) AG**  
Landstrasse 5, Postfach,  
CH-4452 Ittingen,  
SWITZERLAND  
TEL: (061) 927-8383

## UKRAINE

**EURHYTHMICS Ltd.**  
P.O.Box: 37-  
Nedecyev Str. 30  
UA - 89600 Mukachevo,  
UKRAINE  
TEL: (03131) 414-40

## UNITED KINGDOM

**Roland (U.K.) Ltd.**  
Atlantic Close, Swansea  
Enterprise Park, SWANSEA  
SA7 9JF,  
UNITED KINGDOM  
TEL: (01792) 702701

## MIDDLE EAST

### BAHRAIN

**Moon Stores**  
No.1231&1249 Rumaytha  
Building Road 3931, Manama  
339 BAHRAIN  
TEL: 17 813 942

### IRAN

**MOCO INC.**  
No.41 Nike St., Dr.Shariyati Ave.,  
Roberoye Cerahe Mirdamad  
Tehran, IRAN  
TEL: (021) 285-4169

### ISRAEL

**Halilit P. Greenspoon & Sons Ltd.**  
8 Retzif Ha'alia Hashnia St.  
Tel-Aviv-Yafo ISRAEL  
TEL: (03) 6823666

## JORDAN

**MUSIC HOUSE CO. LTD.**  
**FREDDY FOR MUSIC**  
P. O. Box 922846  
Amman 11192 JORDAN  
TEL: (06) 5692696

## KUWAIT

**EASA HUSAIN AL-YOUSIFI**  
**& SONS CO.**  
Abdullah Salem Street,  
Safat, KUWAIT  
TEL: 243-6399

## LEBANON

**Chahine S.A.L.**  
George Zeidan St., Chahine  
Bldg., Achrafieh, P.O.Box: 16-  
5857  
Beirut, LEBANON  
TEL: (01) 20-1441

## OMAN

**TALENTZ CENTRE L.L.C.**  
Malatan House No.1  
Al Noor Street, Ruwi  
SULTANATE OF OMAN  
TEL: 2478 3443

## QATAR

**Al Emadi Co. (Badie Studio & Stores)**  
P.O. Box 62, Doha, QATAR  
TEL: 4423-554

## SAUDI ARABIA

**DAN Awlahil Universal**  
**Electronics APL**  
Corniche Road, Aldossary  
Bldg., 1st Floor, Alkobar,  
31952 SAUDI ARABIA

P.O.Box 2154, Alkhorbar 31952  
SAUDI ARABIA  
TEL: (03) 898 2081

## SYRIA

**Technical Light & Sound**  
Center  
Rawda, Abdul Qader Jazairi St.  
Bldg. No. 21, P.O. BOX 13520,  
Damascus, SYRIA  
TEL: (011) 223-5384

## TURKEY

**ZUHAL DIS TICARET A.S.**  
Galip Dede Cad. No.37  
Beyoglu - Istanbul / TURKEY  
TEL: (0212) 249 85 10

## U.A.E.

**Zak Electronics & Musical**  
**Instrumentos Co. L.L.C.**  
Zabeel Road, Al Sherooq Bldg.,  
No. 14, Ground Floor, Dubai,  
U.A.E.  
TEL: (04) 3360715

## NORTH AMERICA

### CANADA

**Roland Canada Ltd.**  
**(Head Office)**  
5480 Parkwood Way  
Richmond B. C., V6V 2M4  
CANADA  
TEL: (604) 270 6626

### Roland Canada Ltd.

**(Toronto Office)**  
170 Admiral Boulevard  
Mississauga On L5T 2N6  
CANADA  
TEL: (905) 362 9707

### U. S. A.

**Roland Corporation U.S.**  
5100 S. Eastern Avenue,  
Los Angeles, CA 90040-2938,  
U. S. A.  
TEL: (323) 890 3700

As of May 1, 2007 (ROLAND)



\* 0 4 2 3 4 1 7 8 - 0 4 \*

04234178

4YG