

この機器を正しくお使いいただくために、ご使用前に「安全上のご注意」と「使用上のご注意」をよくお読みください。また、この機器の優れた機能を十分ご理解いただくためにも、取扱説明書をよくお読みください。取扱説明書は必要ときにすぐに見ることができるよう、手元に置いてください。

部品の確認


組み立てる前に、部品が揃っていることを確認してください。



- ① シート
- ② ドラム・スティック
- ③ 三脚
- ④ オーディオ・ケーブル
携帯オーディオ・プレイヤーなどを接続するケーブルです。接続方法はHD-1の取扱説明書をお読みください。
- ⑤ インナー・イヤホン
Mサイズのイヤ・ピースが取り付けられています。ケーブルは演奏に差し支えないように引き回してください。
- ⑥ イヤ・ピース (Sサイズ、Lサイズ)
お好みにあわせてサイズを替えてご使用ください。

ドラム・スローン

各部の名称

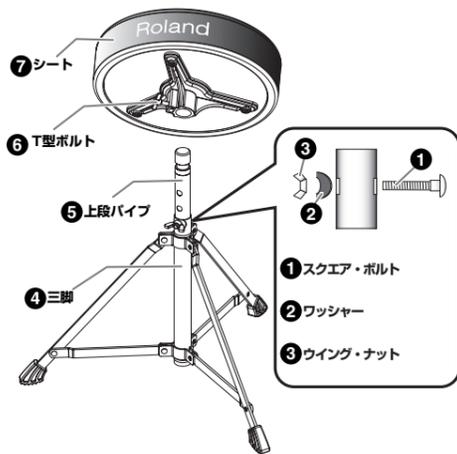

完成図



ドラム・スローン組み立て手順

1. ④三脚をいっばいに開きます。
※ 上段パイプの落下防止のため三脚を逆さにしてください。
※ ゴム足の部分を持って三脚を開いてから、図の灰色の部分を持って上まで引き上げます。
2. ⑤上段パイプを④三脚から抜きます。
この位置まで引き上げます。
3. ④三脚を下図のように置き、⑤上段パイプを④三脚に挿入します。
4. ⑦シートを⑤上段パイプにはめ込み、⑥T型ボルトを回してしっかり固定します。
5. 片手でシートを支えながら③ウイング・ナットと②ワッシャーを外して、⑤上段パイプから①スクエア・ボルトを抜きます。
6. ⑦シートを好みの高さに調節した後、⑤上段パイプと④三脚の穴位置を合わせ、①スクエア・ボルトを④三脚の穴に奥まで差し込みます。
※ 図のように奥まで挿入してください。
7. ①スクエア・ボルトに②ワッシャーを入れて、③ウイング・ナットでしっかり固定します。
※ ワッシャーの向きに注意してください。これで完成です。

安全上のご注意

火災・感電・傷害を防止するには

△警告と△注意の意味について

警告	取扱いを誤った場合に、使用者が死亡または重傷を負う可能性が想定される内容を表わしています。
注意	取扱いを誤った場合に、使用者が傷害を負う危険が想定される場合および物的損害のみの発生が想定される内容を表わしています。 ※物的損害とは、家屋・家財および家畜・ペットにかかる拡大損害を表わしています。

図記号の例

	△は、注意（危険、警告を含む）を表わしています。具体的な注意内容は、△の中に描かれています。左図の場合は、「一般的な注意、警告、危険」を表わしています。
	○は、禁止（してはいけないこと）を表わしています。具体的な禁止内容は、○の中に描かれています。左図の場合は、「分解禁止」を表わしています。
	●は、強制（必ずすること）を表わしています。具体的な強制内容は、●の中に描かれています。左図の場合は、「電源プラグをコンセントから抜くこと」を表わしています。

以下の指示を必ず守ってください

- 警告**
 - この機器を使用する前に、以下の指示と取扱説明書をよく読んでください。
 - この機器を改造しないでください。
 - 修理/部品の交換などで、取扱説明書に書かれていないことは、絶対にしないでください。必ずお買い上げ店またはローランド・サービスに相談してください。
 - 次のような場所での使用や保存はしないでください。
 - 温度が極端に高い場所（直射日光の当たる場所、暖房機器の近く、発熱する機器の上など）
 - 水気の近く（風呂場、洗面台、濡れた床など）や湿度の高い場所
 - 雨に濡れる場所
 - ホコリの多い場所
 - 振動の多い場所
 - この機器を、ぐらつく台の上や傾いた場所に設置しないでください。必ず安定した水平な場所に設置してください。
 - お子様のいるご家庭で使用する場合、お子様の取り扱いやいたずらに注意してください。必ず大人のかたが、監視/指導してあげてください。
- 警告**
 - この機器を落としたり、この機器に強い衝撃を与えないでください。
- 注意**
 - 接続したコードやケーブル類は、複雑にならないように配慮してください。特に、コードやケーブル類は、お子様の手が届かないように配慮してください。
 - この機器の上に乗ったり、機器の上に重いものを置かないでください。
 - 取り外したナットやワッシャー、ネジおよびイヤホン付属のイヤ・ピースは、小さなお子様が誤って飲み込んだりすることのないようお子様の手の届かないところへ保管してください。

使用上のご注意

「安全上のご注意」以外に、次のことに注意してください。

設置について

- 直射日光の当たる場所や、発熱する機器の近く、閉め切った車内などに放置しないでください。変形、変色することがあります。

お手入れについて

- 通常のお手入れは、柔らかい布で乾拭きするか、強く絞った布で汚れを拭き取ってください。汚れが激しいときは、中性洗剤を含んだ布で汚れを拭き取ってから、柔らかい布で乾拭きしてください。

- 変色や変形の原因となるベンジン、シンナーおよびアルコール類は、使用しないでください。

修理について

- お客様がこの機器を改造された場合、以後の性能について保証できなくなります。また、修理をお断りする場合があります。

その他の注意について

- イヤホンは本体または、プラグ部分を持って取り扱ってください。
- この機器が入っていた梱包箱や緩衝材を廃棄する場合、各市町村のゴミの分別基準に従って行ってください。
- 他の機器と接続するときは、誤動作やスピーカーなどの破損を防ぐため、必ずすべての機器の音量を絞った状態で電源を切ってください。
- イヤホン接続の際、使用機器の音量が上がっていると、耳を傷めるばかりでなくイヤホンにも無理がかかりますので、音量を最小にしてから接続してください。
- スローンのパイプの中や高さ調節用の穴に指を入れてください。けがをする恐れがあります。
- 三脚の脚は、スローンが安定するよういっばいまで広げてください。
- スローンのシートの上立たないでください。
- スローンの三脚をセットするときや収納するとき、指などをはさまないように注意してください。

主な仕様

DAP-1 : V-Drums Accessory Package

<ドラム・スローン>

- 座面
直径：305mm
- 高さ
5段階：460、490、520、550、590mm

- 質量
3.4kg

<ドラム・スティック>

- 長さ
405mm

- 質量
45g

- 材質
メイプル

<オーディオ・ケーブル>

- ケーブル長さ
375mm
- プラグ
ステレオ・ミニ・タイプ

- 質量
10g

<インナー・イヤホン>

- ケーブル長さ
3m
- プラグ
ステレオ・ミニ・タイプ

- 質量
20g

<その他>

- 付属品
取扱説明書

※ 製品の仕様および外観は、改良のため予告なく変更することがあります。

Roland® V-Drums Accessory Package **DAP-1** Owner's Manual

Before using this unit, carefully read the sections entitled: "USING THE UNIT SAFELY" and "IMPORTANT NOTES". These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new unit, Owner's Manual should be read in its entirety. The manual should be saved and kept on hand as a convenient reference.

Check the parts


Before you begin assembly, check that you have all of the parts.



- ① Seat
- ② Drum Sticks
- ③ Tripod base
- ④ Audio Cable
Use this cable to connect your portable audio player or other device. For details on connections, refer to the HD-1 owner's manual.
- ⑤ Inner Earphones
Medium-sized ear pieces are attached. Route the cable so that it does not interfere with your playing.
- ⑥ Ear Pieces
You can use the size that you find comfortable

Drum Throne

Part Names

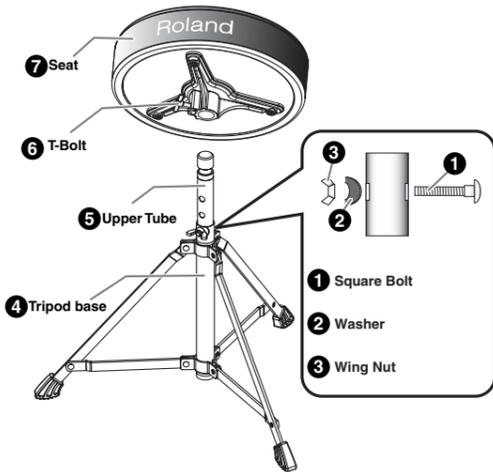

Completed assembly



Copyright © 2007 ROLAND CORPORATION

All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.


Assembling the drum throne

1. Fully open the tripod ④.


* To prevent the upper tube from falling down, turn the tripod upside down when you pull out the upper tube.

* Hold the tripod by its rubber feet and pull outward to spread it open. Then, grasp the area shown in gray and pull it all the way up.


2. Pull the upper tube ⑤ out of the tripod ④.

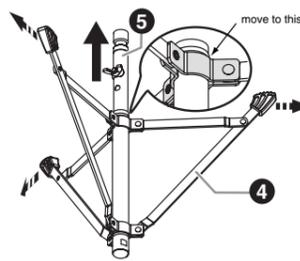


3. Orient the tripod ④ as shown in the illustration below, and insert the upper tube ⑤ into the tripod ④.

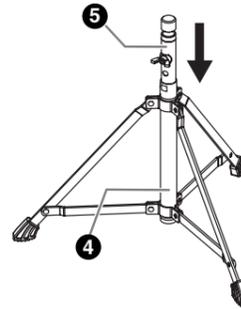

4. Fit the seat ⑦ onto the upper tube ⑤, and turn the T-bolt ⑥ to fasten it firmly.

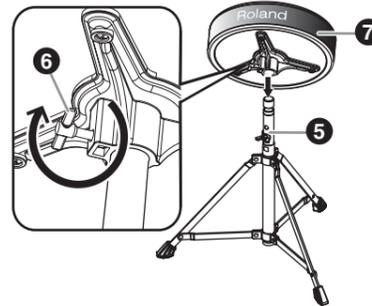


5. While using one hand to support the seat, remove the wing nut ③ and washer ②, and remove the square bolt ① from the upper tube ⑤.

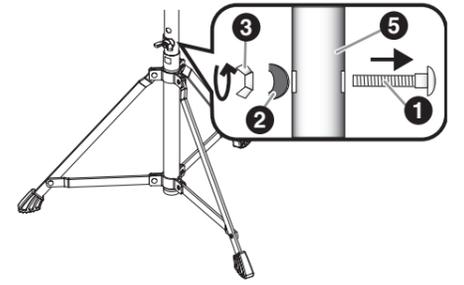


6. Adjust the seat ⑦ to the desired height. Then align the holes of the upper tube ⑤ and the tripod ④, and insert the square bolt ① all the way into the hole of the tripod ④.

* Insert the bolt all the way as shown in the illustration.

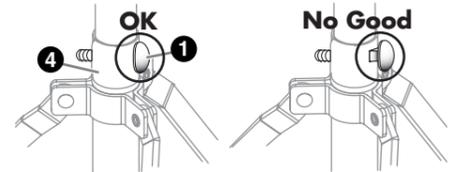

7. Place the washer ② onto the square bolt ①, and use the wing nut ③ to fasten it firmly.

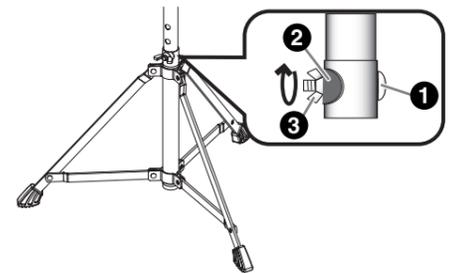

* Be sure that the washer is oriented correctly. This completes assembly.

USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About ⚠ WARNING and ⚠ CAUTION Notices

⚠ WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
⚠ CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols

⚠	The ⚠ symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
⊘	The ⊘ symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
⚡	The ⚡ symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

ALWAYS OBSERVE THE FOLLOWING

⚠ WARNING

- Before using this unit, make sure to read the instructions below, and the Owner's Manual. ⚠
- Connect mains plug of this model to a mains socket outlet with a protective earthing connection. ⚠
- Do not perform any internal modifications on the unit. ⚠
- Do not attempt to repair the unit, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page. ⚠
- Never use or store the unit in places that are:
 - Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are
 - Damp (e.g., baths, washrooms, on wet floors); or are
 - Humid; or are
 - Exposed to rain; or are
 - Dusty; or are
 - Subject to high levels of vibration.

⚠ WARNING

- Make sure you always have the unit placed so it is level and sure to remain stable. Never place it on stands that could wobble, or on inclined surfaces. ⚠
- In households with small children, an adult should provide supervision until the child is capable of following all the rules essential for the safe operation of the unit. ⚠
- Protect the unit from strong impact. (Do not drop it!) ⚠

⚠ CAUTION

- Try to prevent cords and cables from becoming entangled. Also, all cords and cables should be placed so they are out of the reach of children. ⚠
- Never climb on top of, nor place heavy objects on the unit. ⚠
- Should you remove nut, washer, screw, and included ear pieces, keep them in a safe place out of children's reach, so there is no chance of them being swallowed accidentally. ⚠



IMPORTANT NOTES

In addition to the items listed under "USING THE UNIT SAFELY" on this page, please read and observe the following:

Placement

- Do not expose the unit to direct sunlight, place it near devices that radiate heat, leave it inside an enclosed vehicle, or otherwise subject it to temperature extremes. Excessive heat can deform or discolor the unit.

Maintenance

- For everyday cleaning wipe the unit with a soft, dry cloth or one that has been slightly dampened with water. To remove stubborn dirt, use a cloth impregnated with a mild, non-abrasive detergent. Afterwards, be sure to wipe the unit thoroughly with a soft, dry cloth.
- Never use benzine, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

Additional Precautions

- Always grasp the plug or earphones themselves—never pull on the cable. This way you will avoid causing shorts, or damage to the cable's internal elements.
- To prevent malfunction and/or damage to speakers or other devices, always turn down the volume, and turn off the power on all devices before making any connections.
- If you connect the earphones while the volume of your equipment is turned up, you may damage the earphones, and risk damaging your hearing as well. Be sure to minimize the volume before you connect the earphones.
- Do not insert your finger into the throne tube or into the height-adjustment holes. Doing so may cause injury.
- Spread the legs of the tripod all the way apart so that the throne will be stable.
- Do not stand on the seat of the throne.
- Be careful not to pinch your fingers when setting up or storing the throne.

Specifications

DAP-1 V-Drums Accessory Package

Drum Throne

- Seat
Diameter:
305 mm
12-1/16 inches
- Height
5 steps:
460, 490, 520, 550, 580 mm
18-1/8, 19-5/16, 20-1/2, 21-11/16, 22-7/8 inches
- Weight
3.4kg
7lbs 8 oz

Drum Stick

- Length
405mm
16 inches
- Diameter
14mm
9/16 inch
- Weight
45g
2 oz
- Material
Maple

Audio Cable

- Cable length
375mm
14-13/16 inches
- Plug
Stereo miniature phone type
- Weight
10g
1 oz

Inner Earphones

- Cable length
3m
10 feet
- Plug
Stereo miniature phone type
- Weight
20g
1 oz

Others

- Accessory
Owner's Manual

* In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.