



Before using this unit, carefully read the sections entitled: "USING THE UNIT SAFELY" and "IMPORTANT NOTES." These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new unit, Owner's manual should be read in its entirety. The manual should be saved and kept on hand as a convenient reference.



Copyright © 2011 ROLAND CORPORATION  
All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.  
Roland and V-Drums are registered trademarks of Roland Corporation in the United States and/or other countries.

## How to Set Up the Stand

### Contents of the Package

- Stand (MDS-12V)
- Cymbal mount x 3 (with stand)
- Pad mount x 4 (with stand)
- Connection cable (with stand)
- Owner's Manual (this leaflet)
- Drum key
- Cable clip x 6


Fig. 1 Fully Assembled View

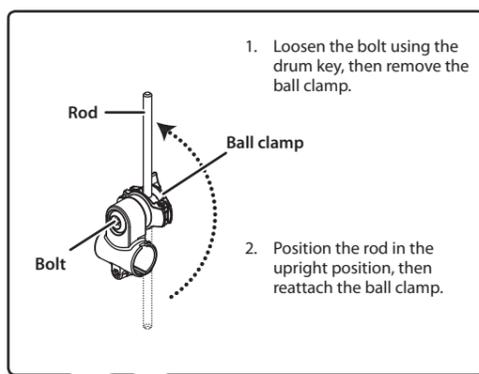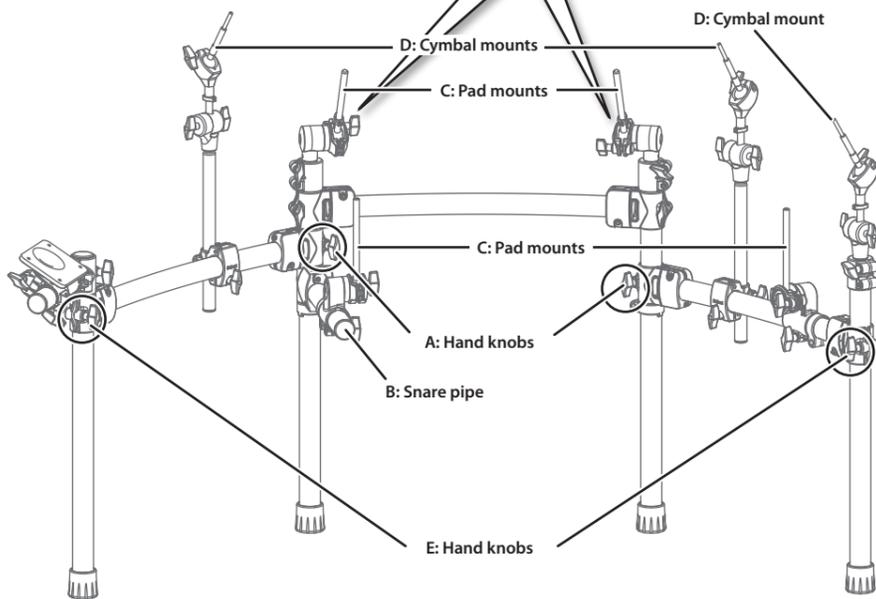

- Loosen hand knobs "A" (two locations) and spread open the left and right legs of the stand as shown in the illustration (Fig. 1).
- Loosen the hand knob of snare pipe "B," and pull out the snare pipe in the direction of the place where the drummer sits.
- Adjust pad mounts "C" (four locations) as shown in the illustration (Fig. 1).
- Attach cymbal mounts "D" (three locations) as shown in the illustration (Fig. 1).
- If the stand wobbles, loosen hand knobs "E" (two locations) and adjust the height.

\* Do NOT loosen any bolts other than hand knobs except when changing the parts or cables for repairing.


Fig. 2 How Leg Pipes Are Spread

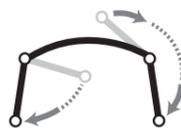

## Caution in Setting Up the Stand

- The tip of the mount is sharp. Handle it with care.
- When setting up or storing the stand, be careful not to pinch the fingers you use to handle the stand.
- Regarding the way of mounting a sound module, pads, or cymbals, please refer to the owner's manual supplied with them.
- Do not spread open the stand farther than 135 degrees as shown in the illustration (Fig. 3). Nor should you spread the stand wider than 1.3 meters (51-3/16 inches).
- Never pull on any cables with excessive force.
- There are labels on the ends of the connection cables allowing easy connection to your sound module. For about connections, refer to the owners manual that came with your sound module.

Fig. 3 View of Stand When Spread Open

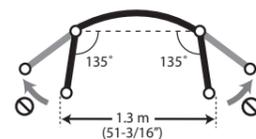

The names on the labels correspond to trigger input jack names as follows.

Label	KIK	SNR	T1	T2	T3	HH	HHC
Jack	KICK	SNARE	TOM 1	TOM 2	TOM 3	HI-HAT	HH CTRL

Label	CR1	CR2	RD	RDE	AX1	AX2
Jack	CRASH1	CRASH2	RIDE	EDGE	AUX 1	AUX 2

\* If the drum stand is to be used for extended periods in the same location, we recommend using a Roland drum mat (TDM series) to prevent discoloration of flooring by the rubber feet.

\* In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.

## USING THE UNIT SAFELY

### INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

#### About WARNING and CAUTION Notices

<b>WARNING</b>	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
<b>CAUTION</b>	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

#### About the Symbols

	The  symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The  symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The  symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

### ALWAYS OBSERVE THE FOLLOWING

#### WARNING

##### Do not disassemble or modify by yourself

Do not open or perform any internal modifications on the unit.

##### Do not repair or replace parts by yourself

Do not attempt to repair the unit, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page.

##### Do not use or store in the following types of locations

- Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are
- Damp (e.g., baths, washrooms, on wet floors); or are
- Exposed to steam or smoke; or are
- Subject to salt exposure; or are
- Humid; or are
- Exposed to rain; or are
- Dusty or sandy; or are
- Subject to high levels of vibration and shakiness.

##### Do not place in an unstable location

Make sure you always have the unit placed so it is level and sure to remain stable. Never place it on stands that could wobble, or on inclined surfaces.

##### Adults must provide supervision in places where children are present

When using the unit in locations where children are present, be careful so no mishandling of the unit can take place. An adult should always be on hand to provide supervision and guidance.

#### WARNING

##### Do not drop or subject to strong impact

Protect the unit from strong impact. (Do not drop it!)

##### Use only stand manufactured by Roland

This stand for use only with specific Roland musical instruments. See apparatus instructions. Use with other models is capable of resulting in instability causing possible injury.

##### Evaluate safety issues before using stands

Make sure to firmly tighten all clamps and bolts after you have assembled the stand and attached a pad or unit to it. You should probably also try to make a habit of checking and retightening them if necessary before every performance. You risk injury if you have loose screws or clamps, since a pad or unit can fall unexpectedly.

##### Manage cables for safety

Try to prevent cords and cables from becoming entangled. Also, all cords and cables should be placed so they are out of the reach of children.

##### Avoid climbing on top of the unit, or placing heavy objects on it

Never climb on top of, nor place heavy objects on the unit.

## CAUTION

### Keep small items out of the reach of children

To prevent accidental ingestion of the parts listed below, always keep them out of the reach of small children.

- Included Parts
- cable clips
- Removable Parts
- screws, washers, nuts, springs, hand knobs

### For C.A. US (Proposition 65)

## WARNING

This product contains chemicals known to cause cancer, birth defects and other reproductive harm, including lead.

## Information

When you need repair service, call your nearest Roland Service Center or authorized Roland distributor in your country as shown below.

### AFRICA

#### EGYPT

Al Fany Trading Office  
9, El-Dokki, El-Helwan, Cairo 11341, EGYPT  
TEL: (02) 4172-1828

#### REUNION

MARCEL FO-YAM SART  
25 Rue Jules Herminier,  
Chaudron - BP79 97401  
Ste-Clotilde Cedex,  
REUNION ISLAND  
TEL: (02) 621-218-429

#### SOUTH AFRICA

T.O.M.S. Sound & Music (Pty) Ltd.  
2 ASTOR ROAD, DENVER  
SANDHURST, ZA 2195,  
SOUTH AFRICA  
TEL: (011) 417-3400

#### Paul Bohmer/PT Ltd.

Boyer Cape Park, Unit 24  
London Road, Ottery 7800  
Cape Town, SOUTH AFRICA  
TEL: (021) 799-4900

### ASIA

#### CHINA

Roland Shanghai Electronics  
Co., Ltd. (BEIJING OFFICE)  
JF, Soloway Terrace Building  
63 West Dawang Road, Chaoyang  
District, Beijing, CHINA  
TEL: (010) 5960-2565

#### Roland Shanghai Electronics Co., Ltd. (SHANGHAI OFFICE)

35 Canton Rd  
Tsimshatsui, Kowloon,  
HONG KONG  
TEL: 852-2737-7688

#### HONG KONG

Tom Lee Music  
11/F Silvercord Tower 1  
30 Canton Rd  
Tsimshatsui, Kowloon,  
HONG KONG  
TEL: 852-2737-7688

#### Parsons Music Ltd.

8th Floor, Railway Plaza, 39  
Chatham Road South, T.S.T.,  
Kowloon, HONG KONG  
TEL: 852-2333-1863

#### INDIA

Rivera Digitec (India) Pvt. Ltd.  
411, Nirmala Kendra Mahalaxmi  
Flats Compound Off. Dr. Edwin  
Moses Road, Mumbai-400011,  
INDIA  
TEL: (022) 2493-9051

### CENTRAL/LATIN AMERICA

#### ARGENTINA

Instrumentos Musicales S.A.  
Av. Santa Fe 2055  
(1123 Buenos Aires, ARGENTINA  
TEL: (011) 4508-2700

#### BARRADOS

A&B Music Suppliers LTD  
12 Webster Industrial Park,  
Wildley, St. Michael, BARRADOS  
TEL: (246) 430-1100

#### BRAZIL

Roland Brasil Ltd.  
Rua San Jose, 211  
Parque Industrial San Jose  
Cotia - Sao Paulo - SP, BRAZIL  
TEL: (011) 4615-5666

#### CHILE

Comercial Fancy B.S.A.  
Rte. 86, 91420-1  
Nataliel Cox #739, 4th Floor  
Santiago - Centro, CHILE  
TEL: (02) 688-9540

#### COLOMBIA

Centro Musical Ltda.  
Cra 43 # 90-25 A-41 Bodegova 9  
Medellin, COLOMBIA  
TEL: (574) 881-2529

#### COSTA RICA

JUAN Banaich Instrumentos  
Musicales  
Ave. 1, Calle 11, Apartado 10237,  
San Jose, COSTA RICA  
TEL: (258-0211)

#### CURACAO

Zealandia Music Center Inc.  
Orionweg 30  
Curacao, Netherlands Antilles  
VIET NAM  
TEL: (305) 5926866

#### DOMINICAN REPUBLIC

Instrumentos Fernando Giraldez  
Calle Proyecto Central No.3  
Ero, La Esmerilla,  
Santo Domingo,  
DOMINICAN REPUBLIC  
TEL: (809) 483-0205

#### ECUADOR

Mus Music  
Rumichaca 822 y Zaruma  
Guayaquil - ECUADOR  
TEL: (593-4) 2302364

#### EL SALVADOR

OMNI MUSIC  
75 Avenida Norte y Final Alameda  
Juan Pablo S.  
Edificio No.4010 San Salvador,  
EL SALVADOR  
TEL: 262-0788

#### AUSTRALIA/NEW ZEALAND

Roland Corporation  
Australia Pty., Ltd.  
38 Campbell Avenue  
Dee Why West, NSW 2099,  
AUSTRALIA  
For Australia  
TEL: (02) 9982-8266  
For New Zealand  
TEL: (09) 3099-715

### GUATEMALA

Casa Instrumental  
Catalada Roosevelt 34-01, zona 11  
Ciudad de Guatemala,  
GUATEMALA  
TEL: (502) 599-2888

### HONDURAS

Almaceen Pajaro Azul S.A. de C.V.  
B.O. Paz Barahona  
3 Ave. 11 Calle, S.C.  
San Pedro Sula, HONDURAS  
TEL: (504) 553-2029

### MARTINIQUE

Musique & Son  
Z. Les Marais  
97222 Le Lamentin,  
MARTINIQUE FWI.  
TEL: 596 596 4266/60

### Gigamic S&L

10 Rue De La Folie  
97200 Fort de France  
SANTO MARTIN F.W.I.  
TEL: 596 976 1522/21

### MEXICO

Casa Veerkamp, s.a. de cv.  
Av. Talavera No. 323, C/O. Ofic.  
de los Padres 01780 Mexico DF,  
MEXICO  
TEL: (55) 566-6699

### NICARAGUA

Musicales Nicaragua  
Almaceen C/Esca Calle Principal  
de la Farmacia 5ta Avenida  
1 Cuadra al Lado #503  
Managua, NICARAGUA  
TEL: (505) 277-2557

### PANAMA

SUPRO MUNDIAL S.A.  
Boulevard Andrews, Albrook,  
Panama City, REP. DE PANAMA  
TEL: (515) 210-0101

### PARAGUAY

Distribuidores De Instrumentos  
Musicales  
I.E. Oliva y Esq. Manduvira  
Asuncion, PARAGUAY  
TEL: (595) 21-492147

### PERU

Audioton  
Distribuciones Musicales SAC  
Juan Fanning 530  
Miraflores  
Lima - PERU  
TEL: (51) 446-1388

### TRINIDAD

AMM Ltd  
Ground Floor  
Maritime Plaza  
Barataria TRINIDAD W.I.  
TEL: (868) 638-6385

### URUGUAY

Todo Musica S.A.  
Francisco Acuna de Figueroa  
1771  
C.P. 11.800  
Montevideo, URUGUAY  
TEL: (02) 924-2335

### VENEZUELA

Allegro, C.A.  
Z. Las Marais  
Oficina Industrial de Turismo  
Caracas, VENEZUELA  
TEL: (0212) 244-1122

### EUROPE

#### BELGIUM/FRANCE/

HOLLAND/  
LUXEMBOURG

Roland Central Europe N.V.  
Houtstraat 3, B-2260, Overel  
(Westen) BELGIUM  
TEL: (014) 575811

#### CROATIA

ART-CENTR  
Degenova 3  
HR - 10000 Zagreb, CROATIA  
TEL: (1) 466-8493

#### CZECH REP.

CECZ REPUBLIC DISTRIBUTOR  
s.r.o.  
Vokrova 247/16  
180 00 Praha 8, CZECH REP.  
TEL: (2) 830 20270

#### DENMARK

Roland Scandinavia A/S  
Skagensvej 7, Postbox 808  
DK-2100 Copenhagen,  
FINLAND  
TEL: (0) 9 68 24 020

#### FINLAND

Roland Scandinavia A/S, Fillal  
Finland  
Vanha Nurmiarvontie 62  
01670 Vantaa, FINLAND  
TEL: (0) 9 68 24 020

#### GERMANY/AUSTRIA

ROLAND ELECTRONIC  
Musikinstrumente HmbH.  
Oststrasse 96, 22844 Nordstedt,  
GERMANY  
TEL: (49) 981-4967

#### SLOVAKIA

ROLAND ELECTRONIC  
Musikinstrumente HmbH.  
Považská 18,  
SK - 940 01 Nove Zámky,  
SLOVAKIA  
TEL: (035) 6424-330

#### GREECE/CYPRUS

STOLLAS S.A.  
Music Sound Light  
155, New National Road  
Patras 26442, GREECE  
TEL: 2610 433400

#### SPAIN

Roland Systems Group EMEA, S.L.  
P.O. Box 126 (S401) 13002,  
08005 Barcelona, SPAIN  
TEL: (01) 4454370-5

### HUNGARY

Roland East Europe Ltd.  
2045, Topokbálat, FSD Park 3. ép.,  
HUNGARY  
TEL: (23) 511011

### IRELAND

Roland Ireland  
E2 Calmsont Park, Calmsont  
Avenue, Dublin 12,  
Republic of IRELAND  
TEL: (01) 4294444

### ITALY

Roland Italy S. p. a.  
Viale delle Industrie 8  
20020 Anese, Milano, ITALY  
TEL: (02) 937-78300

### NORWAY

Roland Scandinavia A/S.  
Kontor Norge  
Lillemorveien 2 Postboks 95  
Lilleaker N-0216 Oslo,  
NORWAY  
TEL: 2273 0074

### POLAND

ROLAND POLSKA SP. Z O.O.  
ul. Krykowskiego 10B  
Wroclaw, POLAND  
TEL: (022) 676-9512

### PORTUGAL

Roland Systems Group EMEA, S.L.  
Roland Office Porto  
Edificio Tower Plaza  
Rotonda Eng. Edgar Cardoso  
23, 9º C  
Vieira da Vila Nova de Gaia,  
PORTUGAL  
TEL: (+351) 22 608 00 60

### ROMANIA

FRS LINES  
Pata Libertatii 1  
Slobozia, ROMANIA  
TEL: (026) 364 609

### RUSSIA

Roland Music LLC  
Dorozhnyaya ul. 3, korpus 6  
117 545 Moscow, RUSSIA  
TEL: (0495) 981-4967

### SERBIA

Musik AP Ltd.  
Srbijka Br. 5-35 - 24413 Palic,  
SERBIA  
TEL: (024) 539 395

### SLOVAKIA

ROLAND ELECTRONIC  
Musikinstrumente HmbH.  
Považská 18,  
SK - 940 01 Nove Zámky,  
SLOVAKIA  
TEL: (035) 6424-330

### SWEDEN

Roland Scandinavia A/S  
SWEDISH SALES OFFICE  
Malmbackagatan 31, 4th fl.  
SE-123 43 Farsta, SWEDEN  
TEL: (08) 668 04 30

### SWITZERLAND

Roland (Switzerland) AG  
Landstrasse 5, Postfach,  
CH-4452 Hingen, SWITZERLAND  
TEL: (061) 975-9997

### SWEDEN

Roland Scandinavia A/S  
SWEDISH SALES OFFICE  
Malmbackagatan 31, 4th fl.  
SE-123 43 Farsta, SWEDEN  
TEL: (08) 668 04 30

### QATAR

AL-EMART TRADING &  
CONTRACTING CO.  
P.O. Box 62, Doha, QATAR  
TEL: (974) 442-554

### SAUDI ARABIA

aSaudi Arabia  
Universal Electronics  
APL  
Behind Pizaa Inn  
Prince

この機器を正しくお使いいただくために、ご使用前に「安全上のご注意」と「使用上のご注意」をよくお読みください。また、この機器の優れた機能を十分ご理解いただくためにも、取扱説明書をよくお読みください。取扱説明書は必要なときにすぐに見ることができるよう、手元に置いてください。


© 2011 ローランド株式会社 本書の一部、もしくは全部を無断で複製、転載することを禁じます。  
Roland、V-Drums は、日本国およびその他の国におけるローランド株式会社の商標または登録商標です。

## 組み立てかた

### 内容物


- スタンド本体 (MDS-12V)
- シンバル・マウント ×3 (スタンドに装着)
- パッド・マウント ×4 (スタンドに装着)
- 接続ケーブル (スタンド内に装着)
- 取扱説明書 (本書)
- ドラム・キー
- ケーブル・クリップ ×6

図1 完成図

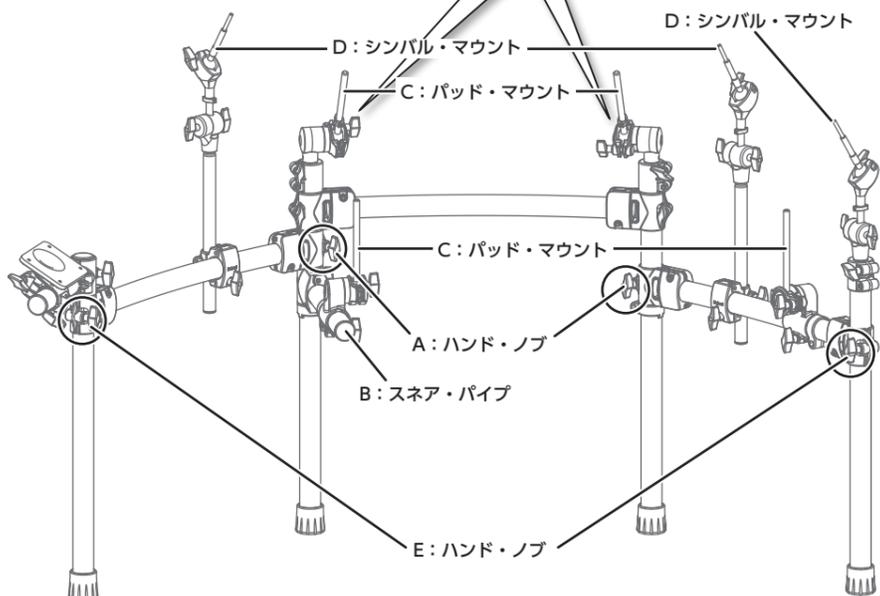

※ 当ドラム・スタンドを長期間同じ場所で使用される場合は、ゴム足の設置面への汚れ付着等の影響を防ぐために、当社製品のドラム・マット (TDM シリーズ) を使用されることをお勧めします。

※ 製品の仕様や外観は、改良のため予告なく変更することがあります。

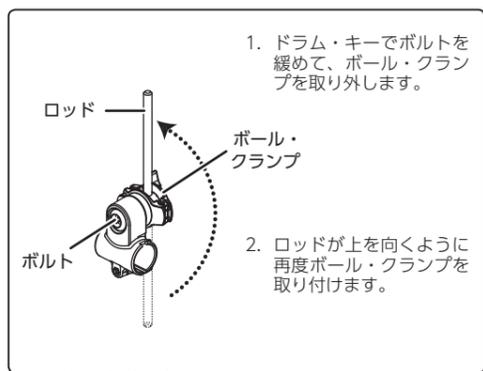

1. ハンド・ノブ (A、2カ所) をゆるめ、左右のスタンド脚パイプを図2のように開きます。
  2. スネア・パイプ (B、1カ所) のハンド・ノブをゆるめ、スネア・パイプを演奏者側に引き出します。
  3. パッド・マウント (C、4カ所) を図1のように調整します。
  4. シンバル・マウント (D、3カ所) を図1のように調整します。
  5. スタンドがぐらつく場合は、必要に応じてハンド・ノブ (E、2カ所) をゆるめて高さを調整します。
- ※ ハンド・ノブ以外のボルトは、パイプなどのパーツ交換時以外、ゆるめないでください。

図2


スタンド脚パイプの開きかた



## 組み立て時の注意

- ・ マウントの先端はとがっています。取り扱いに注意して作業してください。
  - ・ スタンドをセッティング及び収納する際は、スタンドを持っている指をはさまないように注意してください。
  - ・ 音源、パッド、シンバルの取り付け方法については、お使いの製品の取扱説明書をご覧ください。
  - ・ スタンドを135度以上外側には開かないでください。また、両端のスタンド脚パイプの距離を1.3m以上離さないでください(図3)。
  - ・ 接続ケーブルを無理に引っ張らないでください。
  - ・ 音源とケーブルを接続するときは、ケーブル両端のマーキング・ラベルを参照してください。接続については、お使いの音源の取扱説明書をご覧ください。
- マーキング・ラベルは、トリガー・インプットの端子名と以下のように対応しています。

図3 スタンドを開いた状態

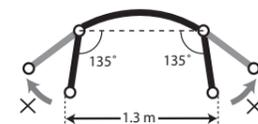

ラベル	KIK	SNR	T1	T2	T3	HH	HHC
端子	KICK	SNARE	TOM 1	TOM 2	TOM 3	HI-HAT	HH CTRL

ラベル	CR1	CR2	RD	RDE	AX1	AX2
端子	CRASH1	CRASH2	RIDE	EDGE	AUX 1	AUX 2

## 安全上のご注意

### 火災・感電・傷害を防止するには

#### △警告と△注意の意味について

<b>警告</b>	取り扱いを誤った場合に、使用者が死亡または重傷を負う可能性が想定される内容を表示しています。
<b>注意</b>	取り扱いを誤った場合に、使用者が傷害を負う危険が想定される場合および物的損害のみの発生が想定される内容を表示しています。 ※物的損害とは、家屋・家財および家畜・ペットにかかわる拡大損害を表示しています。

#### 図記号の例

	△は、注意 (危険、警告を含む) を表しています。具体的な注意内容は、△の中に描かれています。左図の場合は、「一般的な注意、警告、危険」を表しています。
	⊘は、禁止 (してはいけないこと) を表しています。具体的な禁止内容は、⊘の中に描かれています。左図の場合は、「分解禁止」を表しています。
	●は、強制 (必ずすること) を表しています。具体的な強制内容は、●の中に描かれています。左図の場合は、「電源プラグをコンセントから抜くこと」を表しています。

以下の指示を必ず守ってください

### 警告

#### 分解や改造をしない

本機を分解したり、改造したりしないでください。



#### 個人で修理や部品交換はしない

修理/部品の交換などで、取扱説明書に書かれていないことは、絶対にしないでください。必ずお買い上げ店またはローランドお客様相談センターに相談してください。



#### 次のような場所で使用や保管はしない

次のような場所に設置しないでください。

- ・ 温度が極端に高い場所 (直射日光の当たる場所、暖房機器の近く、発熱する機器の上など)
- ・ 水気の近く (風呂場、洗面台、濡れた床など) や湿度の高い場所
- ・ 湯気や油煙が当たる場所
- ・ 塩害の恐れがある場所
- ・ 雨に濡れる場所
- ・ ほこりや砂ぼこりの多い場所
- ・ 振動や揺れの多い場所



#### 不安定な場所に設置しない

本機を、ぐらつく台の上や傾いた場所に設置しないでください。必ず安定した水平な場所に設置してください。



### 警告

#### お子様の取り扱いに注意する

お子様のいる場所で使用する場合、お子様の取り扱いやいたずらに注意してください。必ず大人のかたが、監視/指導してあげてください。



#### 落としたり、強い衝撃を与えたりしない

本機を落としたり、本機に強い衝撃を与えないでください。



### 注意

#### スタンドはローランド製品以外に使用しない

このスタンドはローランド製品専用です。該当製品以外と組み合わせて使うと、不安定な状態となって落下や転倒を引き起こし、けがをする恐れがあります。詳しくは各製品の取扱説明書をご覧ください。



#### スタンドを使う前に安全を確認する

スタンドを使用するときには、クランプ・ノブやネジを確実に締めてください。特に演奏前には確実に取り付けられているかどうか確認してください。確実に取り付けられていないと、パッドやマウントが落下してけがをする恐れがあります。



## 注意

### コードやケーブルは煩雑にならないように配線する

接続したコードやケーブル類は、煩雑にならないように配慮してください。特に、コードやケーブル類は、お子様の手が届かないように配慮してください。



### 上に乗ったり、重いものを置いたりしない

本機の上に乗ったり、機器の上に重いものを置いたりしないでください。



### 小さな部品はお子様の手の届かなくところに置く

下記の部品はお子様が入り込んで飲み込んでしまうことのないよう手の届かないところに保管してください。



- ・ 付属品
- ケーブル・クリップ
- ・ 取りはずしが可能な部品
- ネジ類、ワッシャー類、ナット類、スプリング、ハンド・ノブ

## 使用上のご注意

### 設置について

- ・ 直射日光の当たる場所や発熱する機器の近く、閉め切った車内などに放置しないでください。変形、変色することがあります。
- ・ 極端に温度の違う場所に移動すると、内部に水滴がつく (結露) することがあります。そのまま使用すると故障の原因になります。数時間放置して、結露がなくなってから使用してください。
- ・ 本機の上にゴム製品やビニール製品を長時間放置しないでください。変形、変色することがあります。
- ・ 本機の上に水の入った容器、殺虫剤、香水、アルコール類、マニキュア、スプレー缶などを置かないでください。また、表面に付着した液体は、速やかに乾いた柔らかい布で拭き取ってください。

### お手入れについて

- ・ 通常のお手入れは、柔らかい布で乾拭きするか、固く絞った布で汚れを拭き取ってください。汚れが激しいときは、中性洗剤を含んだ布で汚れを拭き取ってから、柔らかい布で乾拭きしてください。
- ・ 変色や変形の原因となる、ベンジン、シンナー、アルコール類は使用しないでください。

### 修理について

- ・ お客様が本機を分解、改造された場合、以後の性能について保証できなくなります。また、修理をお断りする場合があります。
- ・ 当社では、本機の補修用性能部品 (製品の機能を維持するために必要な部品) を、製造打切後6年間保有しています。この部品保有期間を修理可能な期間とさせていただきます。なお、保有期間を過ぎた後でも、故障箇所によっては修理可能な場合がありますので、お買い上げ店、またはローランドお客様相談センターにご相談ください。
- ・ 故障の原因になりますので、ハンド・ノブ、パイプ、マウントなどに過度の力を加えないでください。
- ・ 輸送や引っ越しをするときは、本機が入っていた箱と緩衝材、または同等品で梱包してください。
- ・ 本機が入っていた梱包箱や緩衝材を廃棄するときは、各地域のゴミの分別基準に従ってください。

## お問い合わせの窓口

- 製品に関するお問い合わせ先      ローランドお客様相談センター      **050-3101-2555**

電話受付時間: 月曜日～土曜日 10:00～17:30 (年末年始を除く)

※IP電話からおかけになって繋がらない場合には、お手数ですが、電話番号の前に「0000」(ゼロ4回)をつけてNTTの一般回線からおかけいただくか、携帯電話をご利用ください。  
※上記窓口の名称、電話番号等は、予告なく変更することがありますのでご了承ください。

- 最新サポート情報      製品情報、イベント/キャンペーン情報、サポートに関する情報など
- ローランド・ホームページ      <http://www.roland.co.jp/>