


Before using this unit, carefully read the sections entitled "USING THE UNIT SAFELY" and "IMPORTANT NOTES." These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new unit, Owner's manual should be read in its entirety. The manual should be saved and kept on hand as a convenient reference.

Copyright © 2011 ROLAND CORPORATION  
All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.  
Roland and V-Drums are registered trademarks of Roland Corporation in the United States and/or other countries.


## How to Set Up the Stand

Fig. 1 Fully Assembled View

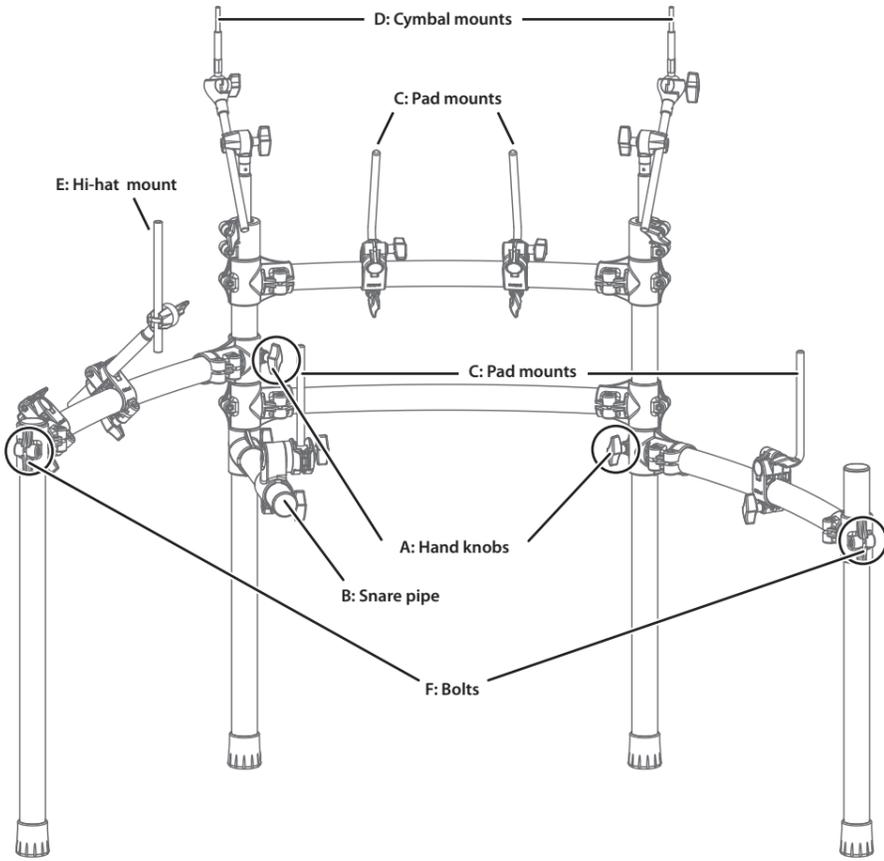

1. Loosen hand knobs "A" (two locations) and spread open the left and right legs of the stand as shown in the illustration (Fig. 2).
2. Loosen the hand knob of snare pipe "B," and pull out the snare pipe in the direction of the place where the drummer sits.
3. Adjust pad mounts "C" (four locations) as shown in the illustration (Fig. 1).
4. Attach cymbal mounts "D" (two locations) and hi-hat mount "E" as shown in the illustration (Fig. 1).
5. If the stand wobbles, use the drum key to loosen Bolts "F" (two locations) and adjust the height.  
\* Do NOT loosen any bolts other than Hand Knobs and Bolts "F" except when changing the parts or cables for repairing.


Fig. 2 How Leg Pipes Are Spread

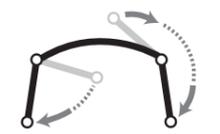

## Caution in Setting Up the Stand

- The tip of the mount is sharp. Handle it with care.
- When setting up or storing the stand, be careful not to pinch the fingers you use to handle the stand.
- Regarding the way of mounting a sound module, pads, or cymbals, please refer to the owner's manual supplied with them.
- Do not spread open the stand farther than 135 degrees as shown in the illustration (Fig. 3). Nor should you spread the stand wider than 1.2 meters (48 inches).

Fig. 3 View of Stand When Spread Open

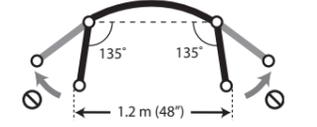

- \* If the drum stand is to be used for extended periods in the same location, we recommend using a Roland drum mat (TDM series) to prevent discoloration of flooring by the rubber feet.
- \* In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.

## Contents of the Package



- Owner's Manual (this leaflet)
- Drum key
- Cable clip x 4
- Cable tie x 2

## USING THE UNIT SAFELY

### INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About **WARNING** and **CAUTION** Notices

**WARNING** Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.

**CAUTION** \* Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols

The **WARNING** symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.

The **CAUTION** symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.

The **CAUTION** symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

### ALWAYS OBSERVE THE FOLLOWING

- WARNING**  
Do not disassemble or modify by yourself  
Do not open or perform any internal modifications on the unit.
- WARNING**  
Do not repair or replace parts by yourself  
Do not attempt to repair the unit, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information."
- WARNING**  
Do not use or store in the following types of locations
  - Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are
  - Damp (e.g., baths, washrooms, on wet floors); or are
  - Exposed to steam or smoke; or are
  - Subject to salt exposure; or are
  - Humid; or are
  - Exposed to rain; or are
  - Dusty or sandy; or are
  - Subject to high levels of vibration and shakiness.
- WARNING**  
Do not place in an unstable location  
Make sure you always have the unit placed so it is level and sure to remain stable. Never place it on stands that could wobble, or on inclined surfaces.
- WARNING**  
Adults must provide supervision in places where children are present  
When using the unit in locations where children are present, be careful so no mishandling of the unit can take place. An adult should always be on hand to provide supervision and guidance.

- WARNING**  
Do not drop or subject to strong impact  
Protect the unit from strong impact. (Do not drop it!)
- CAUTION**  
Use only stand manufactured by Roland  
This stand for use only with specific Roland musical instruments. See apparatus instructions. Use with other models is capable of resulting in instability causing possible injury.
- CAUTION**  
Evaluate safety issues before using stands  
Make sure to firmly tighten all clamps and bolts after you have assembled the stand and attached a pad or unit to it. You should probably also try to make a habit of checking and retightening them if necessary before every performance. You risk injury if you have loose screws or clamps, since a pad or unit can fall unexpectedly.
- CAUTION**  
Manage cables for safety  
Try to prevent cords and cables from becoming entangled. Also, all cords and cables should be placed so they are out of the reach of children.
- CAUTION**  
Avoid climbing on top of the unit, or placing heavy objects on it  
Never climb on top of, nor place heavy objects on the unit.

**CAUTION**

Keep small items out of the reach of children  
To prevent accidental ingestion of the parts listed below, always keep them out of the reach of small children.

- Included Parts cable clips, cable ties
- Removable Parts screws, washers, nuts, springs, hand knobs

**WARNING**

This product contains chemicals known to cause cancer, birth defects and other reproductive harm, including lead.

### Information

When you need repair service, call your nearest Roland Service Center or authorized Roland distributor in your country as shown below.

<b>AFRICA</b>	<b>INDONESIA</b> PT. Citra Intrama Ruko Garden Shopping Arcade Unit 8-C, Podomoro City Jl. Legenda 5, Paman Kev. 28 Jakarta Barat 11470, INDONESIA TEL: (021) 5698-519/5520	<b>CENTRAL/LATIN AMERICA</b>	<b>GUATEMALA</b> Casa Instrumental Calle de Roosevelt 34-01 Zona 11 Ciudad de Guatemala, GUATEMALA TEL: (502) 599-2888	<b>URUGUAY</b> Todo Musica S.A. Francisco Acuna de Figueroa 1771 C.P. 11.800 Montevideo, URUGUAY TEL: (02) 924-2335	<b>HUNGARY</b> Roland East Europe Ltd. 2045, Topokalmi, FSD Park 3. 4p. HUNGARY TEL: (23) 511011	<b>SWEDEN</b> Roland Scandinavia A/S SWEDISH SALES OFFICE Malmhögskolan 31, 4th Fl. SE-123 43 Farsta, SWEDEN TEL: (08) 668 04 30	<b>OMAN</b> TALENT CENTRE L.L.C. Malikah House No. 11 Al Noor Street, Rasat SULTANATE OF OMAN TEL: 2478 3443	
<b>EGYPT</b> Al Fanny Trading Office 9, ElBor El Fakhry Street, ARD El Golf, Helipolis, Cairo 11341, EGYPT TEL: (02) 4172-1828	<b>KOREA</b> Cosmos Corporation 1461-9, Seocho-Dong, Seocho-Ku, Seoul, KOREA TEL: (02) 3486-8855	<b>ARGENTINA</b> Instrumentos Musicales S.A. Av. Santa Fe 2055 (1123 Buenos Aires, ARGENTINA TEL: (011) 4508-2700	<b>HONDURAS</b> Almaceen Pajaro Azul S.A. de C.V. RD Paz Barahona 3 Ave. 11 Calle 5-C San Pedro Sula, HONDURAS TEL: (504) 553-2029	<b>VENEZUELA</b> Instrumentos Musicales Allegro, C.A. Zulmar Mariposa 9732 La Lamentin, Caracas, VENEZUELA TEL: (0212) 244-1122	<b>IRELAND</b> Roland Ireland Ltd. 22 Calmsont Park, Calmsont Avenue, Dublin 12, Republic of IRELAND TEL: (01) 4294444	<b>QATAR</b> AL-SMART TRADING & CONTRACTING CO. P.O. Box 62, Doha, QATAR TEL: 4423-554	<b>SAUDI ARABIA</b> aDawlati Universal Electronics APL Behind Piza Inn Prince Turki Street adawlati Building, PO Box 2154 Alkhobar 31952, SAUDI ARABIA TEL: (03) 8646011	
<b>REUNION</b> MARCEL FO-YAM Sarl 25 Rue Jules Herminet, Chaudoire - BP79 97 491 Ste-Clotilde Cedex, REUNION ISLAND TEL: (0262) 218-429	<b>MALAYSIA/SINGAPORE</b> Roland Asia Pacific Sdn. Bhd. 45-1, Block C2, Jalan PJU 1/39, Dataran Prima, 47301 Petaling Jaya, Selangor, MALAYSIA TEL: (03) 7805-3263	<b>BARBADOS</b> A&B Music Supplies LTD 12 Webster Industrial Park, Widley, St. Michael, BARBADOS TEL: (246) 430-1100	<b>MARTINIQUE</b> Musique & Son Z.I. Les Marais 0732 La Lamentin, Martinique, F.W.I. TEL: 596 596 4266/60	<b>ITALY</b> Roland Italy S. p. A. Viale delle Industrie 8 20020 Annes, Milano, ITALY TEL: (02) 937-78300	<b>NETHERLANDS</b> Roland (Netherlands) B.V. Landstrasse 5, Postfach, CH-4452 Hingen, SWITZERLAND TEL: (061) 975-9997	<b>UKRAINE</b> EURIETHNICS Ltd. PO Box 37-a Nadezhdy Str. 39 UA - 89060 Mukachevo, UKRAINE TEL: (03131) 414-40	<b>UNITED KINGDOM</b> Roland (UK) Ltd. Atlantic Close, SWANSEA SA7 9FL UNITED KINGDOM TEL: (01792) 702701	<b>SYRIA</b> Technical Light & Sound Center PO Box 1520 Bldg No. 49 Damascus, SYRIA TEL: (011) 223-5384
<b>SOUTH AFRICA</b> T.O.M.S. Sound & Music (Pty) Ltd. 2 ASTOR ROAD DENVER SHANNESBURG, ZA 2195, SOUTH AFRICA TEL: (011) 417 3400	<b>PHILIPPINES</b> G.A. Yungco & Co. Inc. 339 G. A. Puyat Avenue Makati, Metro Manila 1200, PHILIPPINES TEL: (02) 899 9801	<b>CHILE</b> Comercial Fancy II S.A. Rte. 86, 914-205-1 Nataliel Cox #739, 4th Floor Santiago - Centro, CHILE TEL: (02) 688-9540	<b>MEXICO</b> Casa Veerlamp s.a. de cv. Av. Talavera No. 323, Col. Ovejas de los Padres 01780 Mexico DF, MEXICO TEL: (55) 566-6699	<b>BELGIUM/FRANCE/ HOLLAND/ LUXEMBOURG</b> Roland Central Europe N.V. Houtstraat 3, B-2260, Oevel (Westen) BELGIUM TEL: (0)41 575811	<b>NETHERLANDS</b> Roland Poland S.p. z o.o. ul. Kya Grodzka 108 02-289 Warszawa, POLAND TEL: (022) 676 9512	<b>NETHERLANDS</b> Roland (UK) Ltd. Atlantic Close, SWANSEA SA7 9FL UNITED KINGDOM TEL: (01792) 702701	<b>MIDDLE EAST</b>	
<b>TAIWAN</b> ROLAND TAIWAN ENTERPRISE CO., LTD. R.F. No. 112 Chung Shan North Road Sec. 2 Taipei 104, TAIWAN, R.O.C. TEL: (02) 2561-3339	<b>COLOMBIA</b> Centre Musical Ltda. CALLE MANANG THANG TAM ST. DIST. 3, BO. CR. MBH CITY, Medellin, COLOMBIA TEL: (574) 3812529	<b>CROATIA</b> ART-CENTR Degenova 3 HR - 10000 Zagreb, CROATIA TEL: (1) 466 8493	<b>NICARAGUA</b> Banbach Instrumentos Musicales Nicaragua Alameda C/Esca Calle Principal de la Farmacia Sta. Avenida 1 Cuadra al Sur, MANAGUA, NICARAGUA TEL: (505) 277-2557	<b>CZECH REP.</b> CZECH REPUBLIC DISTRIBUTOR s.r.o. Vokrova 247/16 180 00 Praha 8, CZECH REP. TEL: (2) 830 20270	<b>PORTUGAL</b> Roland Systems Group EMEA, S.L. Branch Office Porto Edificio Tower Plaza Rotonda Eng. Edgar Cardoso 23, 9º C Vieira da Silva Nova de Gaia, PORTUGAL TEL: (+351) 22 608 00 60	<b>NETHERLANDS</b> Roland (UK) Ltd. Atlantic Close, SWANSEA SA7 9FL UNITED KINGDOM TEL: (01792) 702701	<b>TURKEY</b> ZUNAL DIS TICARET A.S. Galip Dede Cad. No.33 Beyoğlu, Istanbul, TURKEY TEL: (0212) 249 85 10	
<b>CHINA</b> Roland Shanghai Electronics Co., Ltd. SF No. 1500 Pingliang Road Shanghai 200000, CHINA TEL: (021) 5580-0800	<b>THAILAND</b> Theera Music Co., Ltd. 100-108 Soi Weng Nakornkasem, Bangkok 10100, THAILAND TEL: (0)21 24-8821	<b>DOMINICAN REPUBLIC</b> Instrumentos Musicales S.A. Calle Proyecto Central No.3 Eto. La Esperilla, Santo Domingo, DOMINICAN REPUBLIC TEL: (809) 483-0305	<b>PANAMA</b> SUPRO MUNDIAL S.A. Boulevard Andrews, Albrook, Panama City, REP. DE PANAMA TEL: (51) 446-8466	<b>FINLAND</b> Roland Scandinavia A/S Skogsmäns 7, Postbox 880 01670 Vantaa, FINLAND TEL: (0) 9 68 24 020	<b>ROMANIA</b> FES LINES Sistele Libertati 1, 115500 Cheorgheni, ROMANIA TEL: (026) 364 609	<b>NETHERLANDS</b> Roland (UK) Ltd. Atlantic Close, SWANSEA SA7 9FL UNITED KINGDOM TEL: (01792) 702701	<b>U.A.E.</b> Zak Electronics & Musical Instruments Co. L.L.C. Zakref Road, Al Sheequeh Bldg., No. 14, Ground Floor, Dubai, U.A.E. TEL: (04) 3602715	
<b>HONG KONG</b> Tom Lee Music 11/F Silvercord Tower 1 30 Canton Rd. Tsimshatsui, Kowloon, HONG KONG TEL: 852-2737-7688	<b>VIETNAM</b> VIET THONG CORPORATION 386 CACH MANG THANG TAM ST. DIST. 3, BO. CR. MBH CITY, VIETNAM TEL: (89) 916540	<b>PARAGUAY</b> Distribuidores De Instrumentos Musicales E.E. Oliva y Esq. Manduvira Asuncion, PARAGUAY TEL: (595) 21 492147	<b>DENMARK</b> Roland Scandinavia A/S Vanha Nurmijärvenie 62 01670 Vantaa, FINLAND TEL: (0) 9 68 24 020	<b>SLOVAKIA</b> DAN Acoustics s.r.o. Považská 18, SK - 940 01 Nove Zámky, SLOVAKIA TEL: (035) 6424 330	<b>NETHERLANDS</b> Roland (UK) Ltd. Atlantic Close, SWANSEA SA7 9FL UNITED KINGDOM TEL: (01792) 702701	<b>NETHERLANDS</b> Roland (UK) Ltd. Atlantic Close, SWANSEA SA7 9FL UNITED KINGDOM TEL: (01792) 702701	<b>NETHERLANDS</b> Roland (UK) Ltd. Atlantic Close, SWANSEA SA7 9FL UNITED KINGDOM TEL: (01792) 702701	
<b>PARSONS MUSIC LTD.</b> 8th Floor, Railway Plaza, 39 Chatham Road South, T.S.T., Kowloon, HONG KONG TEL: 852-2333-1863	<b>ECUADOR</b> Mas Musik Rumichaca 822 y Zaruma Guayaquil - ECUADOR TEL: (593-4) 2302364	<b>PERU</b> Audioton Distribuciones Musicales SAC Juan Fanning 530 Miraflores Lima - PERU TEL: (51) 446-1388	<b>NETHERLANDS</b> Roland (UK) Ltd. Atlantic Close, SWANSEA SA7 9FL UNITED KINGDOM TEL: (01792) 702701	<b>NETHERLANDS</b> Roland (UK) Ltd. Atlantic Close, SWANSEA SA7 9FL UNITED KINGDOM TEL: (01792) 702701	<b>NETHERLANDS</b> Roland (UK) Ltd. Atlantic Close, SWANSEA SA7 9FL UNITED KINGDOM TEL: (01792) 702701	<b>NETHERLANDS</b> Roland (UK) Ltd. Atlantic Close, SWANSEA SA7 9FL UNITED KINGDOM TEL: (01792) 702701	<b>NETHERLANDS</b> Roland (UK) Ltd. Atlantic Close, SWANSEA SA7 9FL UNITED KINGDOM TEL: (01792) 702701	
<b>INDIA</b> Rivera Digitec (India) Pvt. Ltd. 411, Niranjan Kendra Mahalaxmi Flats Compound Off. Dr. Edwin Moses Road, Mumbai-400011, INDIA TEL: (022) 2493 9051	<b>EL SALVADOR</b> OMNI MUSIC 75 Avenida Norte y Final Alameda Juan Pablo II, Edificio No.4010 San Salvador, EL SALVADOR TEL: 262-0788	<b>TRINIDAD</b> AMI Ltd Ground Floor Maritime Plaza Barataria TRINIDAD W.I. TEL: (868) 638 6385	<b>NETHERLANDS</b> Roland (UK) Ltd. Atlantic Close, SWANSEA SA7 9FL UNITED KINGDOM TEL: (01792) 702701	<b>NETHERLANDS</b> Roland (UK) Ltd. Atlantic Close, SWANSEA SA7 9FL UNITED KINGDOM TEL: (01792) 702701	<b>NETHERLANDS</b> Roland (UK) Ltd. Atlantic Close, SWANSEA SA7 9FL UNITED KINGDOM TEL: (01792) 702701	<b>NETHERLANDS</b> Roland (UK) Ltd. Atlantic Close, SWANSEA SA7 9FL UNITED KINGDOM TEL: (01792) 702701	<b>NETHERLANDS</b> Roland (UK) Ltd. Atlantic Close, SWANSEA SA7 9FL UNITED KINGDOM TEL: (01792) 702701	

## IMPORTANT NOTES

### Placement

- Do not expose the unit to direct sunlight, place it near devices that radiate heat, leave it inside an enclosed vehicle, or otherwise subject it to temperature extremes. Excessive heat can deform or discolor the unit.
- When moved from one location to another where the temperature and/or humidity is very different, water droplets (condensation) may form inside the unit. Damage or malfunction may result if you attempt to use the unit in this condition. Therefore, before using the unit, you must allow it to stand for several hours, until the condensation has completely evaporated.
- Do not allow rubber, vinyl, or similar materials to remain on this unit for long periods of time. Such objects can discolor or otherwise harmfully affect the finish.
- Do not put anything that contains water on this unit. Also, avoid the use of insecticides, perfumes, alcohol, nail polish, spray cans, etc., near the unit. Swiftly wipe away any liquid that spills on the unit using a dry, soft cloth.

### Maintenance

- For everyday cleaning wipe the unit with a soft, dry cloth or one that has been slightly dampened with water. To remove stubborn dirt, use a cloth impregnated with a mild, non-abrasive detergent. Afterwards, be sure to wipe the unit thoroughly with a soft, dry cloth.
- Never use benzene, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

### Additional Precautions


- Use a reasonable amount of care when using the hand knobs, pipes, and mounts. Rough handling can lead to be damaged.
- When you need to transport the unit, package it in the box (including padding) that it came in, if possible. Otherwise, you will need to use equivalent packaging materials.

この機器を正しくお使いいただくために、ご使用前に「安全上のご注意」と「使用上のご注意」をよくお読みください。また、この機器の優れた機能を十分ご理解いただくためにも、取扱説明書をよくお読みください。取扱説明書は必要なときにすぐに見ることができるよう、手元に置いてください。

© 2011 ローランド株式会社 本書の一部、もしくは全部を無断で複製、転載することを禁じます。Roland、V-Drums は、日本国およびその他の国におけるローランド株式会社の商標または登録商標です。

## 組み立てかた

図1 完成図

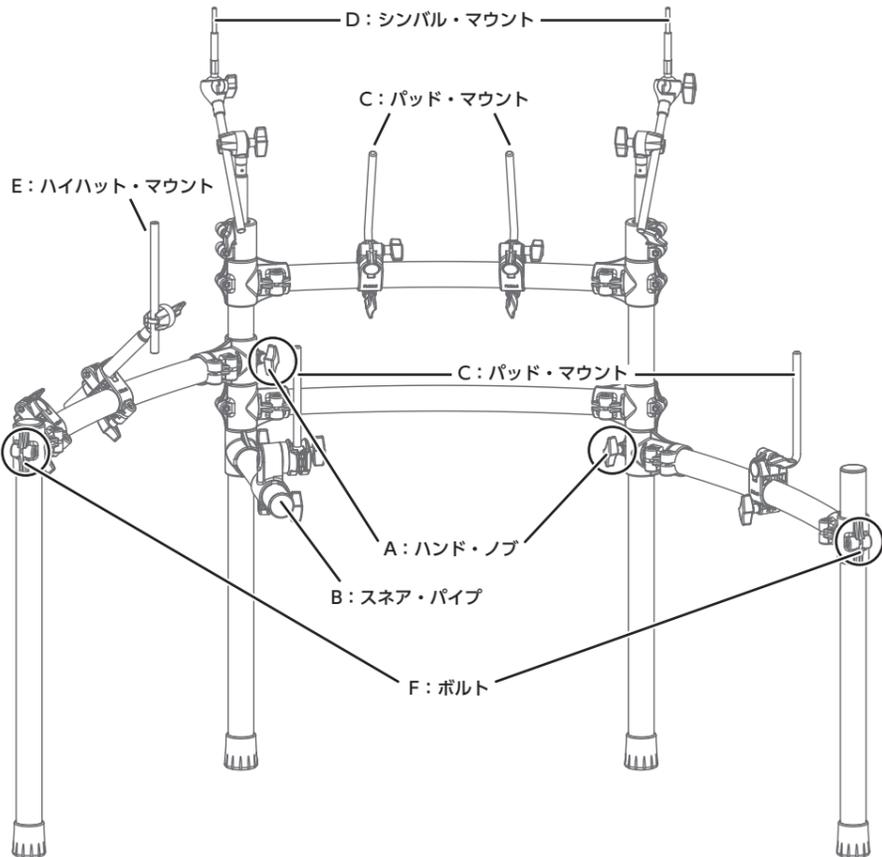


※ 当ドラム・スタンドを長期間同じ場所で使用される場合は、ゴム足の設置面への汚れ付着等の影響を防ぐために、当社製品のドラム・マット (TDM シリーズ) を使用されることをお勧めします。

※ 製品の仕様や外観は、改良のため予告なく変更することがあります。

1. ハンド・ノブ (A、2カ所) をゆるめ、左右のスタンド脚パイプを図2のように開きます。

図2 スタンド脚パイプの開きかた

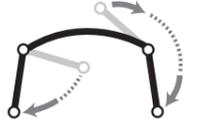

2. スネア・パイプ (B、1カ所) のハンド・ノブをゆるめ、スネア・パイプを演奏者側に引き出します。

3. パッド・マウント (C、4カ所) を図1のように調整します。

4. シンバル・マウント (D、2カ所)、ハイハット・マウント (E、1カ所) を図1のように調整します。


5. スタンドがぐらつく場合は、必要に応じてボルト (F、2カ所) をドラム・キーでゆるめて高さを調整します。

※ ハンド・ノブ以外のボルト (Fを除く) は、パイプなどのパーツ交換時以外、ゆるめないでください。

## 組み立て時の注意

- マウントの先端はとがっています。取り扱いに注意して作業してください。
- スタンドをセッティング及び収納する際は、スタンドを持っている指をはさまないように注意してください。
- 音源、パッド、シンバルの取り付け方法については、お使いの製品の取扱説明書をご覧ください。
- スタンドを135度以上外側には開かないでください。また、両端のスタンド脚パイプの距離を1.2m以上離さないでください (図3)。

図3 スタンドを開いた状態

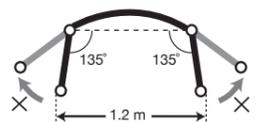

## 内容物



## 安全上のご注意

### 火災・感電・傷害を防止するには

#### △警告と△注意の意味について

<b>警告</b>	取り扱いを誤った場合に、使用者が死亡または重傷を負う可能性が想定される内容を表示しています。
<b>注意</b>	取り扱いを誤った場合に、使用者が傷害を負う危険が想定される場合および物的損害のみの発生が想定される内容を表示しています。 ※物的損害とは、家屋・家財および家畜・ペットにかかわる拡大損害を表示しています。

#### 図記号の例

	△は、注意 (危険、警告を含む) を表しています。具体的な注意内容は、△の中に描かれています。左図の場合は、「一般的な注意、警告、危険」を表しています。
	⊘は、禁止 (してはいけないこと) を表しています。具体的な禁止内容は、⊘の中に描かれています。左図の場合は、「分解禁止」を表しています。
	●は、強制 (必ずすること) を表しています。具体的な強制内容は、●の中に描かれています。左図の場合は、「電源プラグをコンセントから抜くこと」を表しています。

以下の指示を必ず守ってください

### 警告

#### 分解や改造をしない

本機を分解したり、改造したりしないでください。



#### 個人で修理や部品交換はしない

修理/部品の交換などで、取扱説明書に書かれていないことは、絶対にしないでください。必ずお買い上げ店またはローランドお客様相談センターに相談してください。



#### 次のような場所で使用や保管はしない

次のような場所に設置しないでください。

- 温度が極端に高い場所 (直射日光の当たる場所、暖房機器の近く、発熱する機器の上など)
- 水気の近く (風呂場、洗面台、濡れた床など) や湿度の高い場所
- 湯気や油煙が当たる場所
- 塩害の恐れがある場所
- 雨に濡れる場所
- ほこりや砂ぼこりの多い場所
- 振動や揺れの多い場所



#### 不安定な場所に設置しない

本機を、ぐらつく台の上や傾いた場所に設置しないでください。必ず安定した水平な場所に設置してください。



### 警告

#### お子様の取り扱いに注意する

お子様のいる場所で使用する場合、お子様の取り扱いやいたずらに注意してください。必ず大人のかたが、監視/指導してあげてください。



#### 落としたり、強い衝撃を与えたりしない

本機を落としたり、本機に強い衝撃を与えないでください。



### 注意

#### スタンドはローランド製品以外に使用しない

このスタンドはローランド製品専用です。該当製品以外と組み合わせて使うと、不安定な状態となって落下や転倒を引き起こし、けがをする恐れがあります。詳しくは各製品の取扱説明書をご覧ください。



#### スタンドを使う前に安全を確認する

スタンドを使用するときには、クランプ・ノブやネジを確実に締めてください。特に演奏前には確実に取り付けられているかどうか確認してください。確実に取り付けられていないと、パッドやマウントが落下してけがをする恐れがあります。



## 注意

### コードやケーブルは煩雑にならないように配線する

接続したコードやケーブル類は、煩雑にならないように配慮してください。特に、コードやケーブル類は、お手持ちの物が届かないように配慮してください。



### 上に乗ったり、重いものを置いたりしない

本機の上に乗ったり、機器の上に重いものを置いたりしないでください。



### 小さな部品はお子様の手の届かなくところに置く

下記の部品はお子様が悪く飲み込んで取り出すことのないよう手の届かないところに保管してください。



- 付属品
- ケーブル・クリップ、ケーブル・タイ
- 取りはずしが可能な部品
- ネジ類、ワッシャー類、ナット類、スプリング、ハンド・ノブ

## 使用上のご注意

### 設置について

- 直射日光の当たる場所や発熱する機器の近く、閉め切った車内などに放置しないでください。変形、変色することがあります。
- 極端に温度の違う場所に移動すると、内部に水滴がつく (結露) ことがあります。そのまま使用すると故障の原因になります。数時間放置して、結露がなくなってから使用してください。
- 本機の上にゴム製品やビニール製品を長時間放置しないでください。変形、変色することがあります。
- 本機の上に水の入った容器、殺虫剤、香水、アルコール類、マニキュア、スプレー缶などを置かないでください。また、表面に付着した液体は、速やかに乾いた柔らかい布で拭き取ってください。

### お手入れについて

- 通常のお手入れは、柔らかい布で乾拭きするか、固く絞った布で汚れを拭き取ってください。汚れが激しいときは、中性洗剤を含んだ布で汚れを拭き取ってから、柔らかい布で乾拭きしてください。
- 変色や変形の原因となる、ベンジン、シンナー、アルコール類は使用しないでください。

### 修理について

- お客様が本機を分解、改造された場合、以後の性能について保証できなくなります。また、修理をお断りする場合があります。
- 当社では、本機の補修用性能部品 (製品の機能を維持するために必要な部品) を、製造打切後6年間保有しています。この部品保有期間を修理可能の期間とさせていただきます。なお、保有期間を過ぎた後でも、故障箇所によっては修理可能な場合がありますので、お買い上げ店、またはローランドお客様相談センターにご相談ください。
- 故障の原因になりますので、ハンド・ノブ、パイプ、マウントなどに過度の力を加えないでください。
- 輸送や引っ越しをするときは、本機が入っていた箱と緩衝材、または同等品で梱包してください。
- 本機が入っていた梱包箱や緩衝材を廃棄するときは、各地域のゴミの分別基準に従ってください。

## お問い合わせの窓口

- 製品に関するお問い合わせ先 **ローランドお客様相談センター 050-3101-2555**

電話受付時間: 月曜日～土曜日 10:00～17:30 (年末年始を除く)

※IP電話からおかけになって繋がらない場合には、お手数ですが、電話番号の前に「0000」(ゼロ4回)をつけてNTTの一般回線からおかけいただくか、携帯電話をご利用ください。  
※上記窓口の名称、電話番号等は、予告なく変更することがありますのでご了承ください。

- 最新サポート情報 **製品情報、イベント/キャンペーン情報、サポートに関する情報など**  
ローランド・ホームページ <http://www.roland.co.jp/>