




Frame Panel Large Center Option for Pro Tools® | S6

The Frame Panel Large Center option is a special panel to be used when the Master Module is placed at the front as shown in Figure 1.

 See the most recent S6 Installation Guide for detailed instructions about installing the Master module or Compression Panels.

To install:

- 1 Install the Master Module in slots 1 and 2 (closest to the Bolster).
- 2 Install the Master Compression Panel (**A** in Figure 1) behind the Master Module.
 - In Frame Chassis Small (Reduced Depth), use the small Master Compression Panel.
 - In Frame Chassis Large (Extended Depth), use the large Master Compression Panel.
- 3 Install the Frame Panel Large Center (**B** in Figure 1, Part Number 7020-38885-00) behind the Master Compression Panel. Make sure to orient the panel correctly so that the extended edge is towards the back of the console.
- 4 To complete the installation, install T-strips as described in the *S6 Installation Guide*.

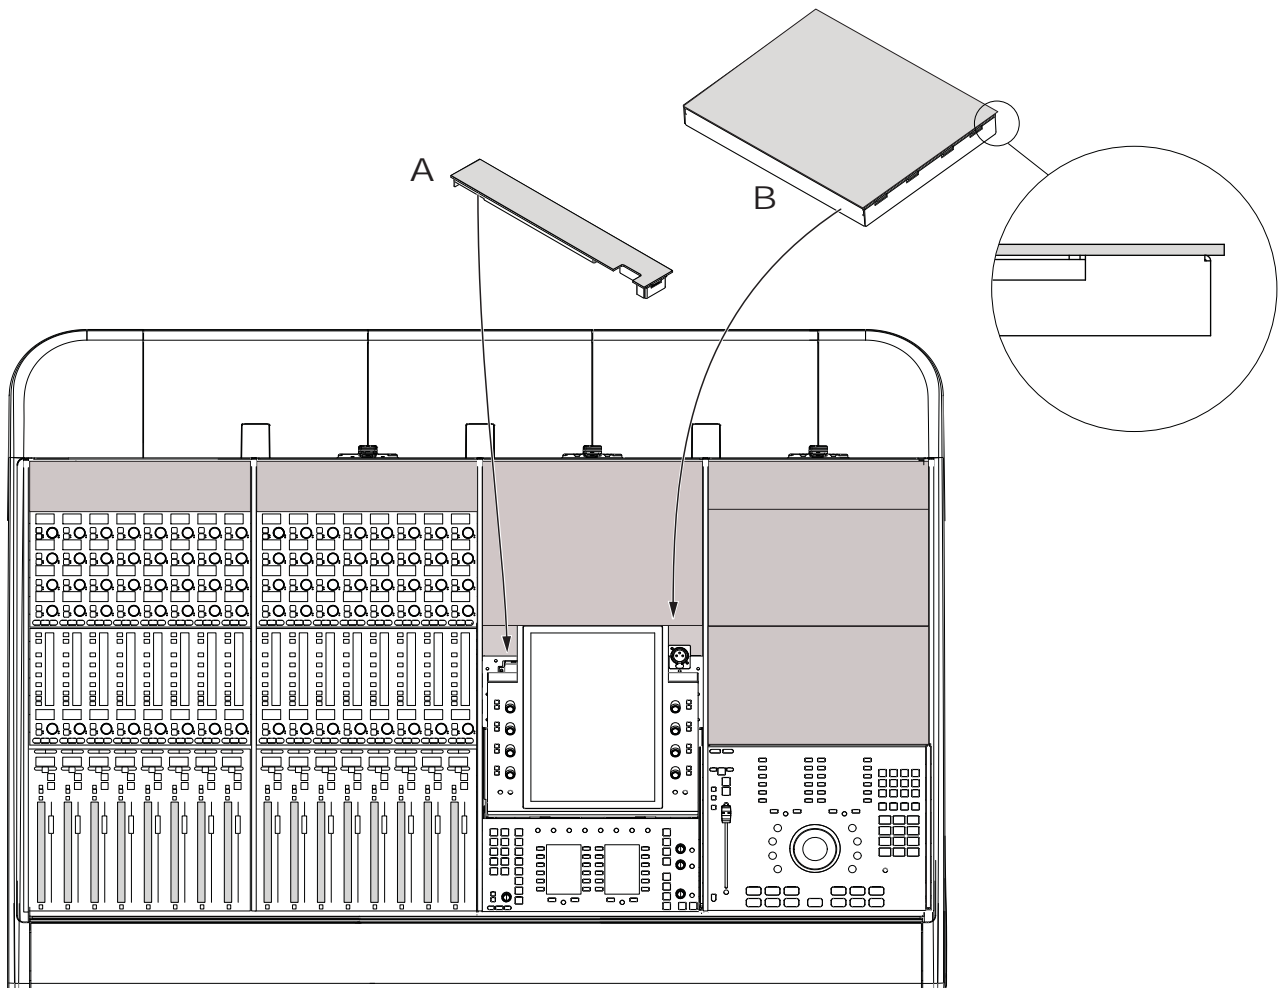


Figure 1. Master Compression Panel and Frame Panel Large Center in a Frame Chassis Small